


VSC Warning Buzzer Circuit

CIRCUIT DESCRIPTION

The VSC warning buzzer sounds during VSC operation.

WIRING DIAGRAM

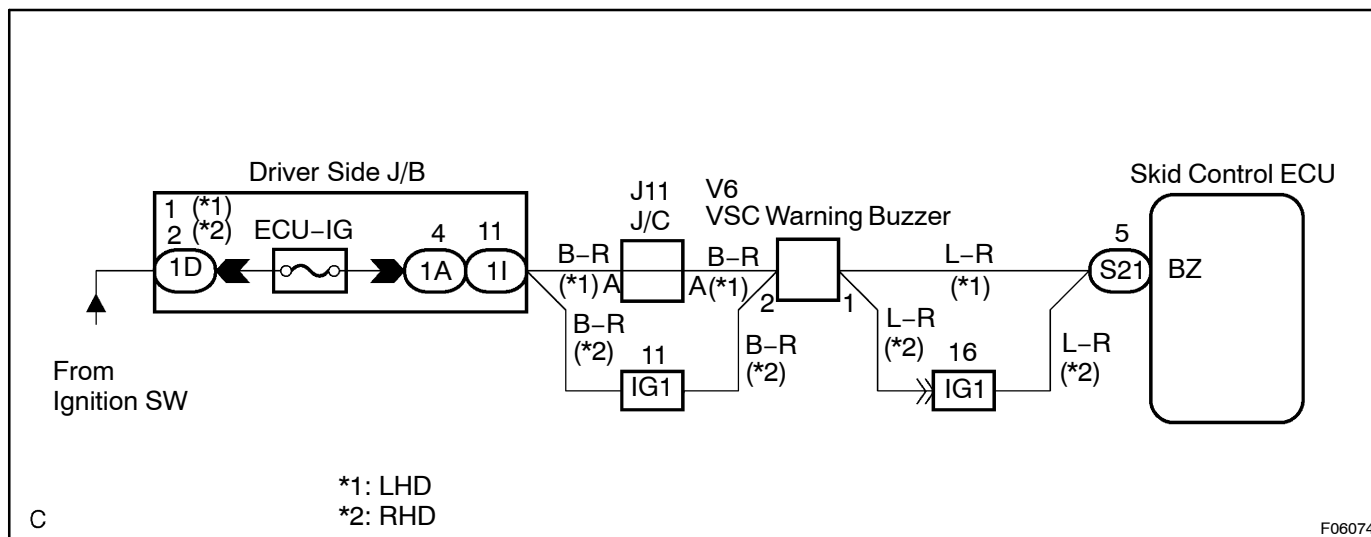

INSPECTION PROCEDURE

HINT:

Start inspection from step 1 in case of using the hand-held tester and start from step 2 in case of not using the hand-held tester.

1	Check operation of the VSC warning buzzer.
----------	---

PREPARATION:

- (a) Connect the hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and turn the hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the hand-held tester.

CHECK:


Check "beep, beep" sound of the VSC warning buzzer by the hand-held tester.

OK

Check and replace skid control ECU.

NG

2	Check VSC warning buzzer.
----------	----------------------------------

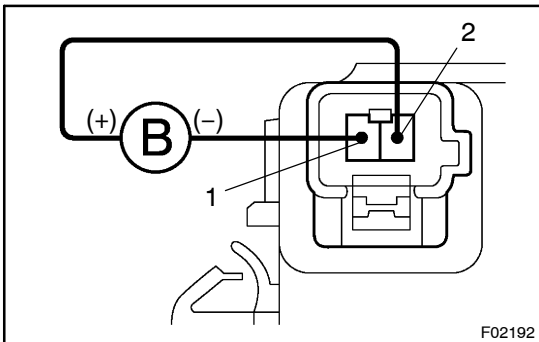

PREPARATION:

Disconnect the VSC warning buzzer connector.

CHECK:

Apply battery voltage to the terminals 1 and 2 of VSC warning buzzer connector. Check that the VSC warning buzzer sound.

NG

Replace the VSC warning buzzer.

OK

3 Check for open and short circuit in harness and connector between skid control ECU and the VSC warning buzzer (See page IN-34).

NG

Repair or replace harness or connector.

OK

Check and replace skid control ECU.