

## DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below. (Proceed to the page given for that circuit.)

DTC No. (See Page)	Detection Item	Trouble Area	SRS Warning Light
B1135/24 (DI-424)	• Half connection in airbag sensor assy center malfunction	• Airbag sensor assy center • Wire harness	Blink
B1140/32 (DI-428)	• Side airbag sensor assy (RH) malfunction	• Side airbag sensor assy (RH) • Airbag sensor assy center • Wire harness	Blink
B1141/33 (DI-434)	• Side airbag sensor assy (LH) malfunction	• Side airbag sensor assy (LH) • Airbag sensor assy center • Wire harness	Blink
B1160/83 (DI-448)	• Short in curtain shield airbag (RH) squib circuit	• Curtain shield airbag assy (RH) (squib) • Airbag sensor assy center • Floor wire	Blink
B1161/84 (DI-452)	• Open in curtain shield airbag (RH) squib circuit	• Curtain shield airbag assy (RH) (squib) • Airbag sensor assy center • Floor wire	Blink
B1162/81 (DI-455)	• Short in curtain shield airbag (RH) circuit (to ground)	• Curtain shield airbag assy (RH) (squib) • Airbag sensor assy center • Floor wire	Blink
B1163/82 (DI-458)	• Short in curtain shield airbag (RH) circuit (to B+)	• Curtain shield airbag assy (RH) (squib) • Airbag sensor assy center • Floor wire	Blink
B1165/87 (DI-461)	• Short in curtain shield airbag (LH) squib circuit	• Curtain shield airbag assy (LH) (squib) • Airbag sensor assy center • Floor wire No. 2	Blink
B1166/88 (DI-465)	• Open in curtain shield airbag (LH) squib circuit	• Curtain shield airbag assy LH (squib) • Airbag sensor assy center • Floor wire No. 2	Blink
B1167/85 (DI-468)	• Short in curtain shield airbag (LH) circuit (to ground)	• Curtain shield airbag assy LH (squib) • Airbag sensor assy center • Floor wire No. 2	Blink
B1168/86 (DI-471)	• Short in curtain shield airbag (LH) circuit (to B+)	• Curtain shield airbag assy LH (squib) • Airbag sensor assy center • Floor wire No. 2	Blink

### HINT:

- When the SRS warning light remains lit up and the DTC is the normal code, this means a voltage source drops.  
This malfunction is not stored in memory by the airbag sensor assembly and if the power source voltage returns to normal, the SRS warning light will automatically go out.
- When 2 or more codes are indicated, the codes will be displayed in numeral order starting from the lowest numbered code.
- If a code not listed on the chart is displayed, the airbag sensor assembly is faulty.