


## TERMINALS OF ECU

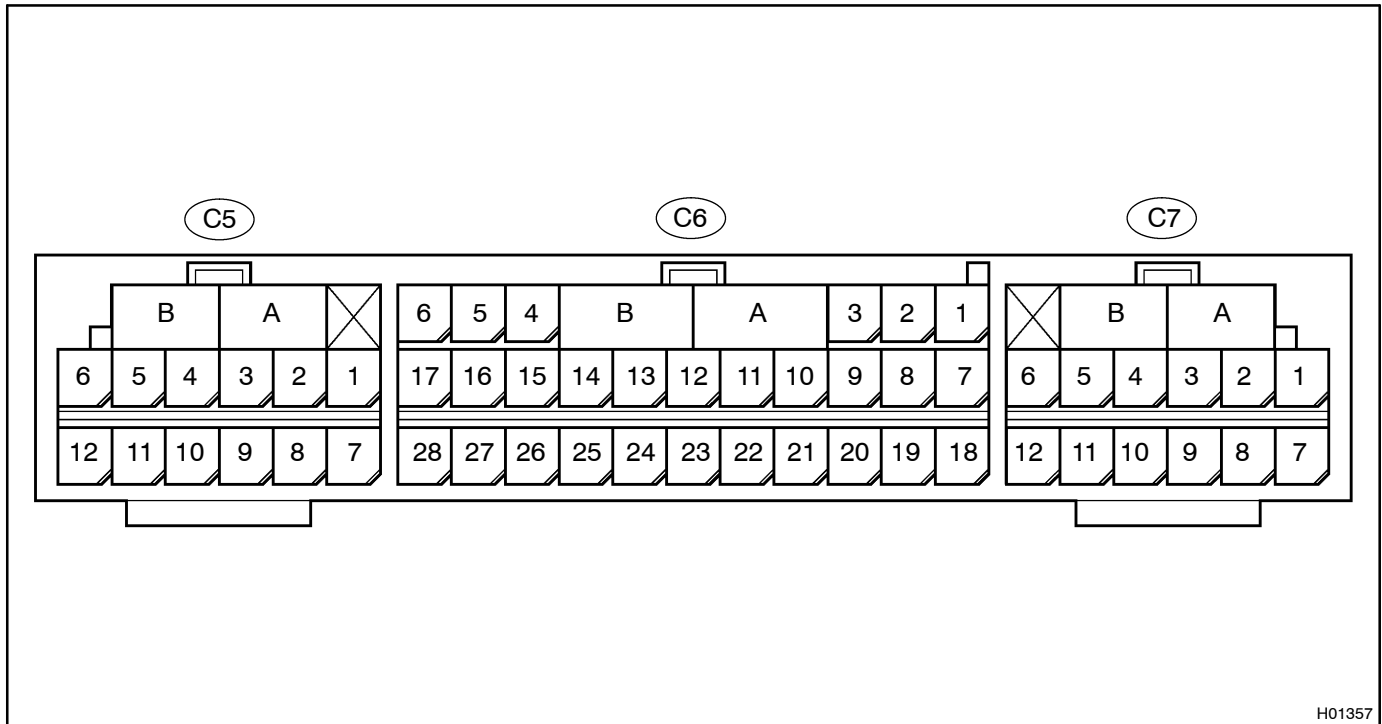

H01357

No.	Symbol	Terminal Name
A	-	Electrical Connector Check Mechanism
B	-	Electrical Connector Check Mechanism
C6 - 3	LA	SRS Warning Light
C6 - 5	IG2	Power Source (IGN Fuse)
C6 - 6	ACC	Power Source (CIG Fuse)
C6 - 9	+SR	Front Airbag Sensor (RH)
C6 - 10	P+	Squib (Instrument Panel Passenger Airbag Assy)
C6 - 11	P-	Squib (Instrument Panel Passenger Airbag Assy)
C6 - 12	SIL	Diagnosis
C6 - 13	D-	Squib (Horn Button Assy)
C6 - 14	D+	Squib (Horn Button Assy)
C6 - 15	+SL	Front Airbag Sensor (LH)
C6 - 19	Tc	Diagnosis
C6 - 20	-SR	Front Airbag Sensor (RH)
C6 - 23	GSW2	ECM
C6 - 26	-SL	Front Airbag Sensor (LH)
C6 - 27	E1	Ground
C6 - 28	E2	Ground
C5 - 1	PL-	Squib (Seat Belt Pretensioner, LH)
C5 - 2	PL+	Squib (Seat Belt Pretensioner, LH)
C5 - 3	ICL+	Squib (Curtain Shield Airbag Assy (LH))
C5 - 4	ICL-	Squib (Curtain Shield Airbag Assy (LH))
C5 - 5	SFL-	Squib (Front seat Airbag Assy LH)
C5 - 6	SFL+	Squib (Front seat Airbag Assy LH)
C5 - 7	VUPL	Side Airbag Sensor Assy (LH)

No.	Symbol	Terminal Name
C5 - 9	ESL	Side Airbag Sensor Assy (LH)
C5 - 10	SSL+	Side Airbag Sensor Assy (LH)
C5 - 12	SSL-	Side Airbag Sensor Assy (LH)
C7 - 1	SFR+	Squib (Front Seat Airbag Assy RH)
C7 - 2	SFR-	Squib (Front Seat Airbag Assy RH)
C7 - 3	ICR-	Squib (Curtain Shield Airbag Assy (RH))
C7 - 4	ICR+	Squib (Curtain Shield Airbag Assy (RH))
C7 - 5	PR+	Squib (Pretensioner, RH)
C7 - 6	PR-	Squib (Pretensioner, RH)
C7 - 7	SSR-	Side Airbag Sensor Assy (RH)
C7 - 9	SSR+	Side Airbag Sensor Assy (RH)
C7 - 10	ESR	Side Airbag Sensor Assy (RH)
C7 - 12	VUPR	Side Airbag Sensor Assy (RH)