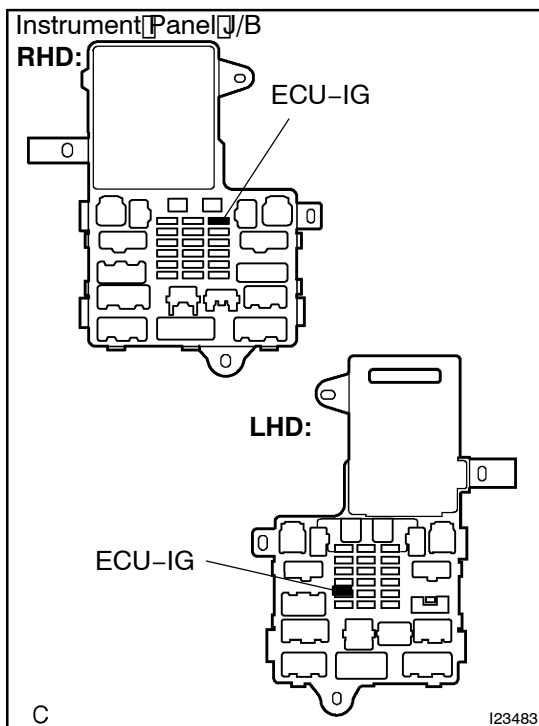


INSPECTION PROCEDURE

1 Check ECU-IG fuse.

**PREPARATION:**

- Remove the fuse box opening cover.
- Remove ECU-IG fuse from instrument panel junction block.

CHECK:

Check continuity of ECU-IG fuses.

OK:


Continuity

NG

Check for short in all the harness and components connected to the ECU-IG fuse (See attached wiring diagram).

OK

2 Check voltage between terminals IG of theft deterrent ECU and body ground.

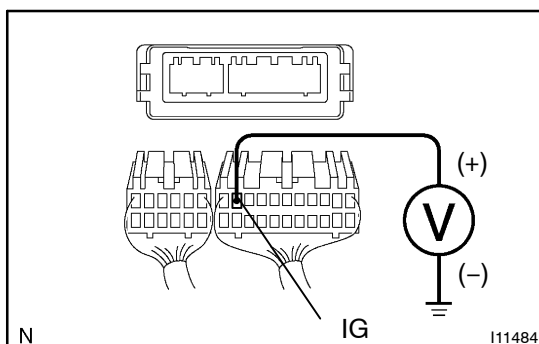**PREPARATION:**

- Disconnect the theft deterrent ECU connectors.
- Turn ignition switch ON.

CHECK:

Measure voltage between terminals IG of theft deterrent ECU connector and body ground.

OK:

Voltage: 10~14V

NG

Check and repair harness and connector between theft deterrent ECU and battery (See page N-34).

OK

Check and replace theft deterrent ECU.