


Power source circuit


CIRCUIT DESCRIPTION

This circuit provides power to operate the Transponder Key ECU

WIRING DIAGRAM

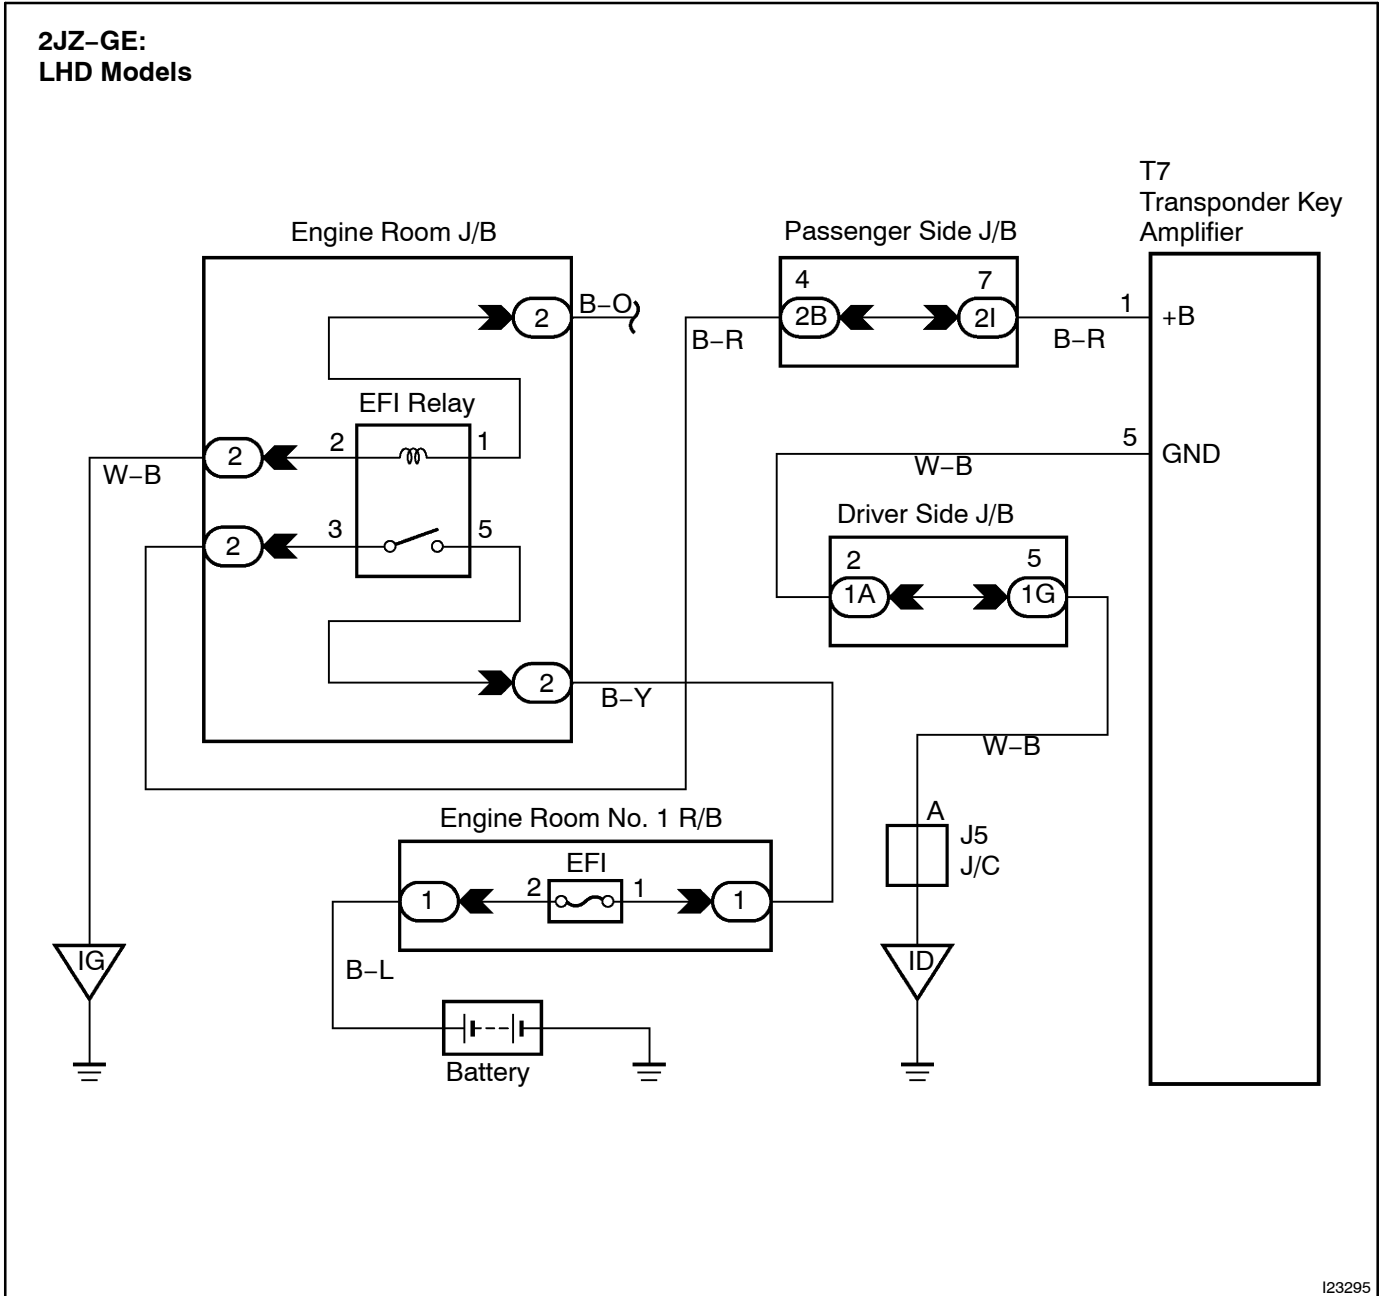

2JZ-GE:
RHD Models

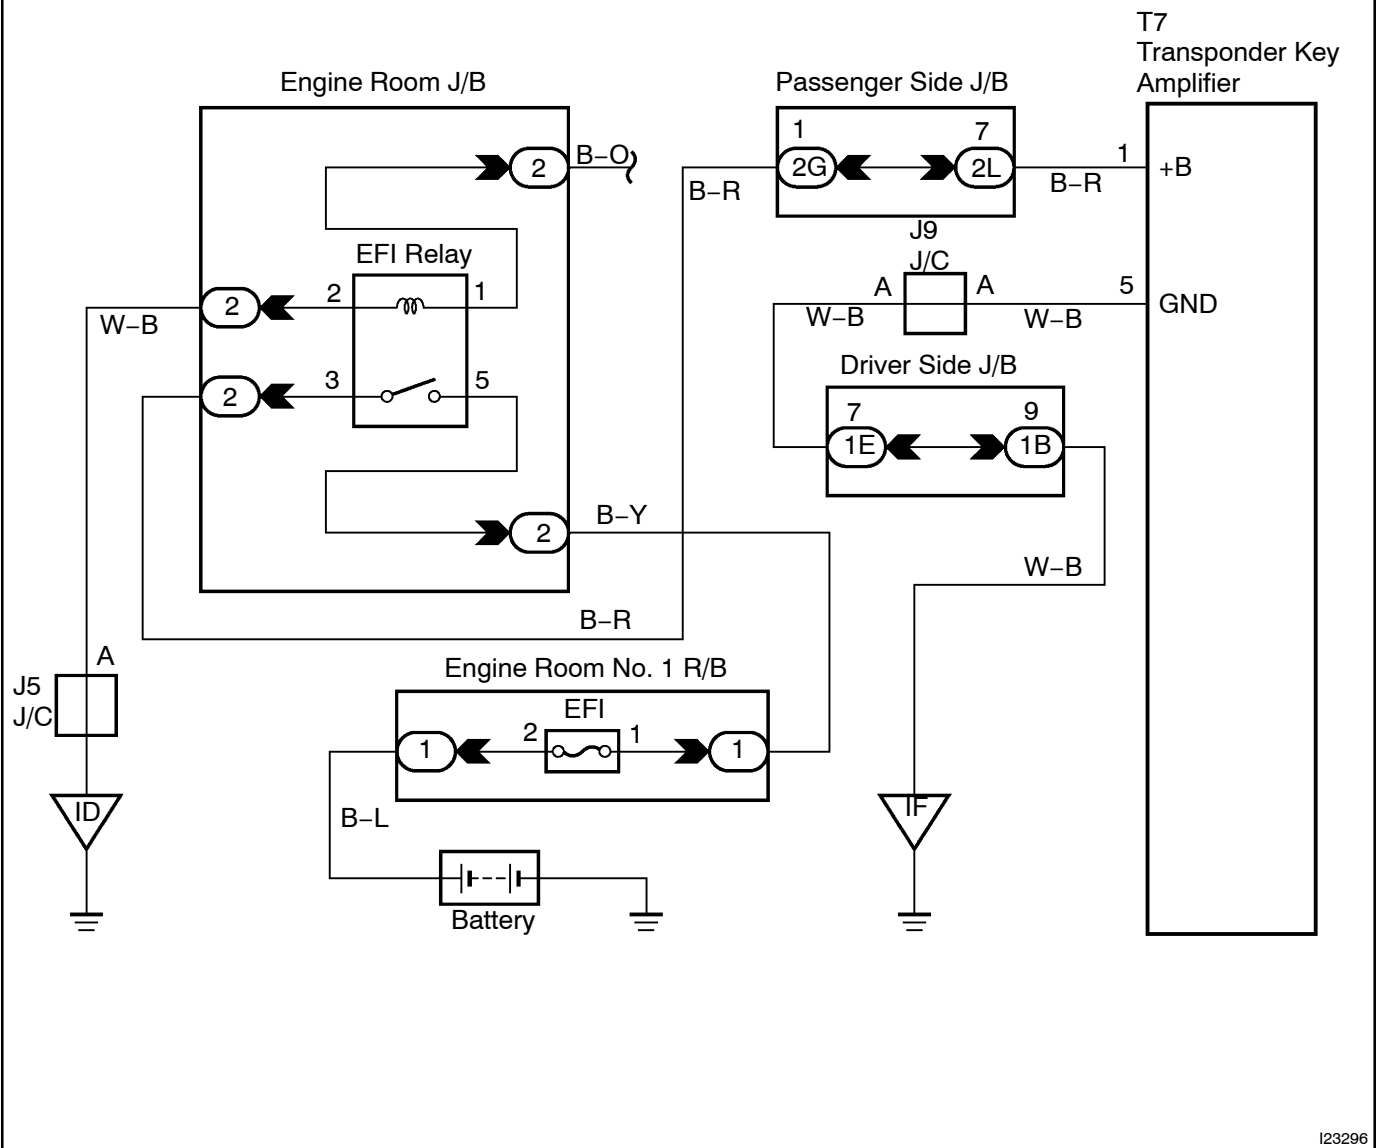

123296

INSPECTION PROCEDURE**1 Check EFI fuse.****CHECK:**

Check continuity of EFI fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK**2 Check voltage between terminals EFI and GND of Transponder Key ECU connector.****PREPARATION:**

- (a) Turn ignition switch OFF.
- (b) Disconnect the Transponder Key ECU connector.

CHECK:

Measure voltage between terminals B and GND.

OK:

Voltage: 10 - 14 V

OK

Proceed to next circuit inspection shown in problem symptoms table (See page DI-538).

NG**3 Check wire harness and connector between Transponder Key ECU and body ground.****NG**

Repair or replace wire harness or connector.

OK

Check and repair wire harness and connector between Transponder Key ECU and Battery.