

PROBLEM SYMPTOMS TABLE**LIGHT CONTROL:**

Symptom	Suspect Area	See page
Auto turn-off does not operate	12. Door courtesy switch circuit (Driver side)	DI-574*
	13. Ignition switch	DI-549*
	14. Body ECU	-
	15. Theft deterrent ECU	-

DOOR LOCK CONTROL:

Symptom	Suspect Area	See page
Lock or unlock cannot be operated with door lock control S/W.	1. Door lock control switch circuit	DI-589*
	2. Body ECU	-
	3. Power window master switch	-
Door key linked function does not operate.	1. Door key lock and unlock switch circuit	DI-589*
	2. Body ECU	-
	3. Power window master switch	-
Key confinement prevention function does not operate.	1. Key unlock switch circuit	DI-566*
	2. Body ECU	-
	3. Power window master switch	-

WIRELESS DOOR LOCK CONTROL:

Symptom	Suspect Area	See page
All function of wireless door lock control system do not operate.	1. Transmitter	BE-132*
	2. Key unlock warning switch circuit	DI-566*
	3. Wireless door lock ECU	BE-132*
	4. Body ECU	-
Lock (or unlock) function does not operate.	1. Door key lock and unlock switch circuit	DI-589*
	2. Door unlock detection switch circuit	DI-586*
	3. Body ECU	-
Automatic lock function operates even if any door is opened within 30 seconds after all doors are unlocked by wireless door lock control system .	1. Door courtesy switch circuit	DI-574*
	2. Body ECU	-

OTHERS:

Symptom	Suspect Area	See page
Does not operate the illuminated entry	1. Illumination circuit	DI-555*
	2. Body ECU	-
Key remainder system does not operate.	1. Key unlock warning switch circuit	DI-566*
	2. Body ECU	-
Seat belt warning does not operate.	1. Driver buckle switch circuit	DI-569*
	2. Body ECU	-
	3. Combination meter	BE-2*

* : See Pub No. RM684E