


Back door courtesy switch circuit

CIRCUIT DESCRIPTION


The back door courtesy switch goes on when back door is opened and goes off when back door is closed.

WIRING DIAGRAM

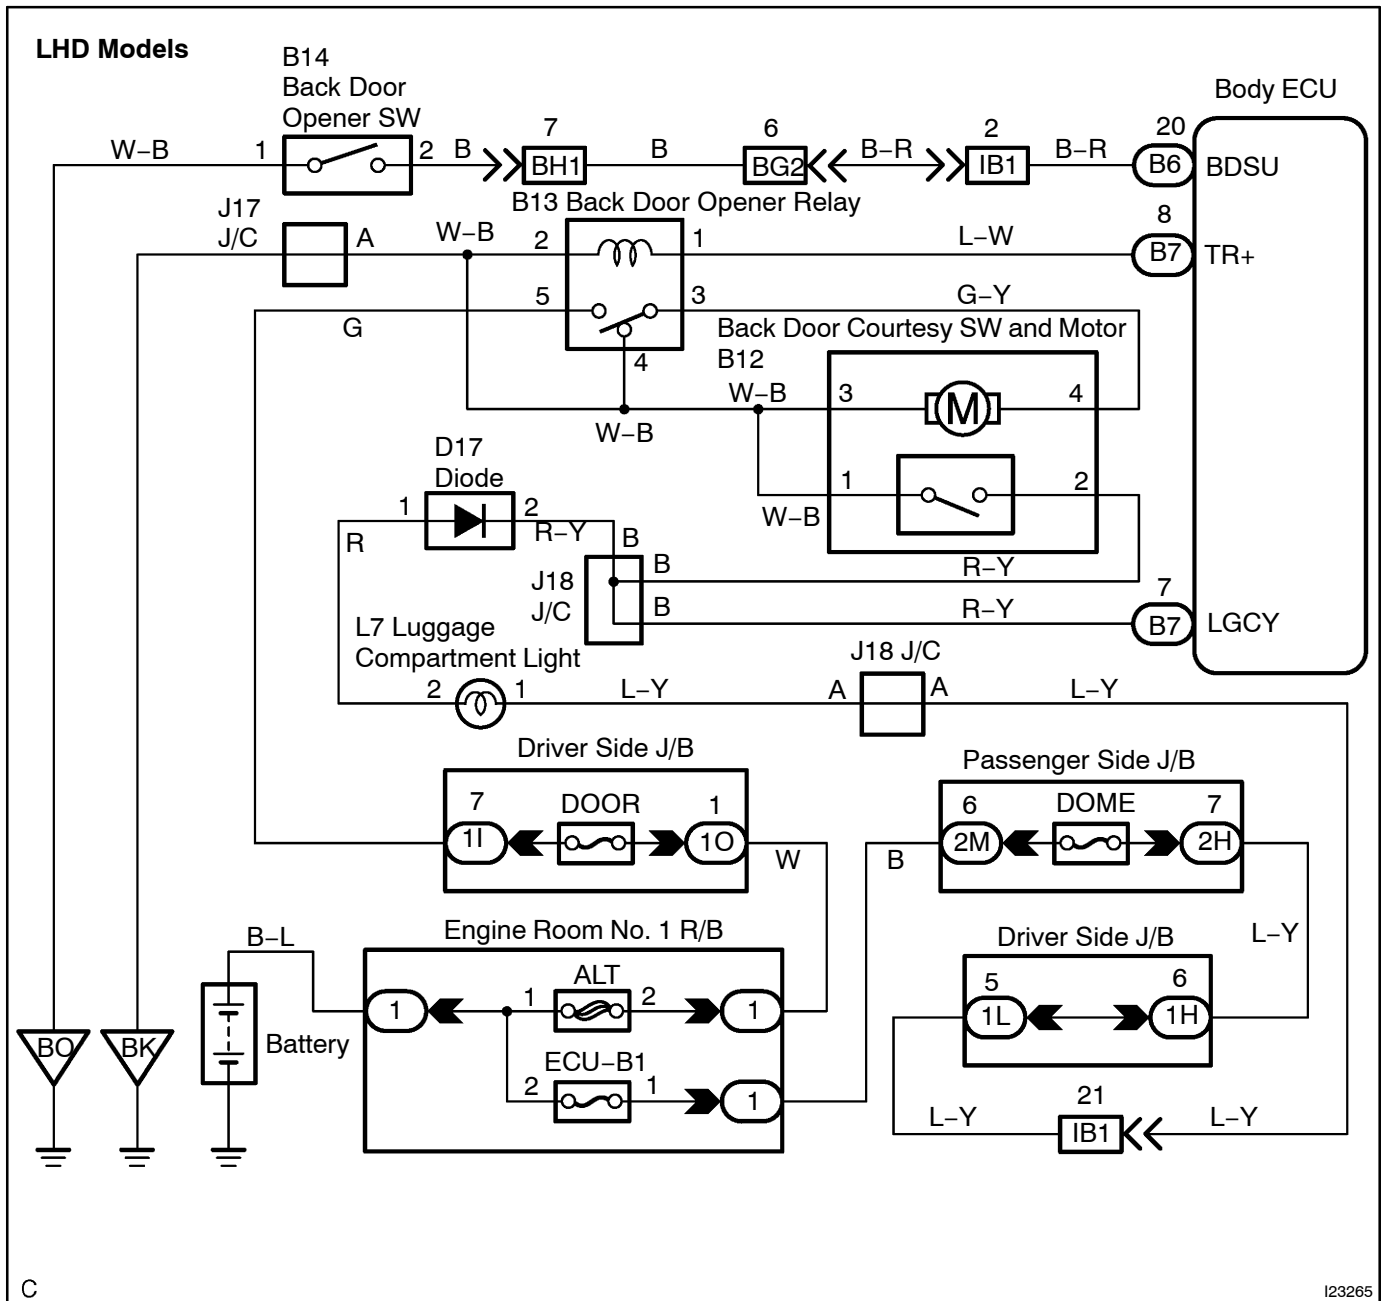

C

I23265

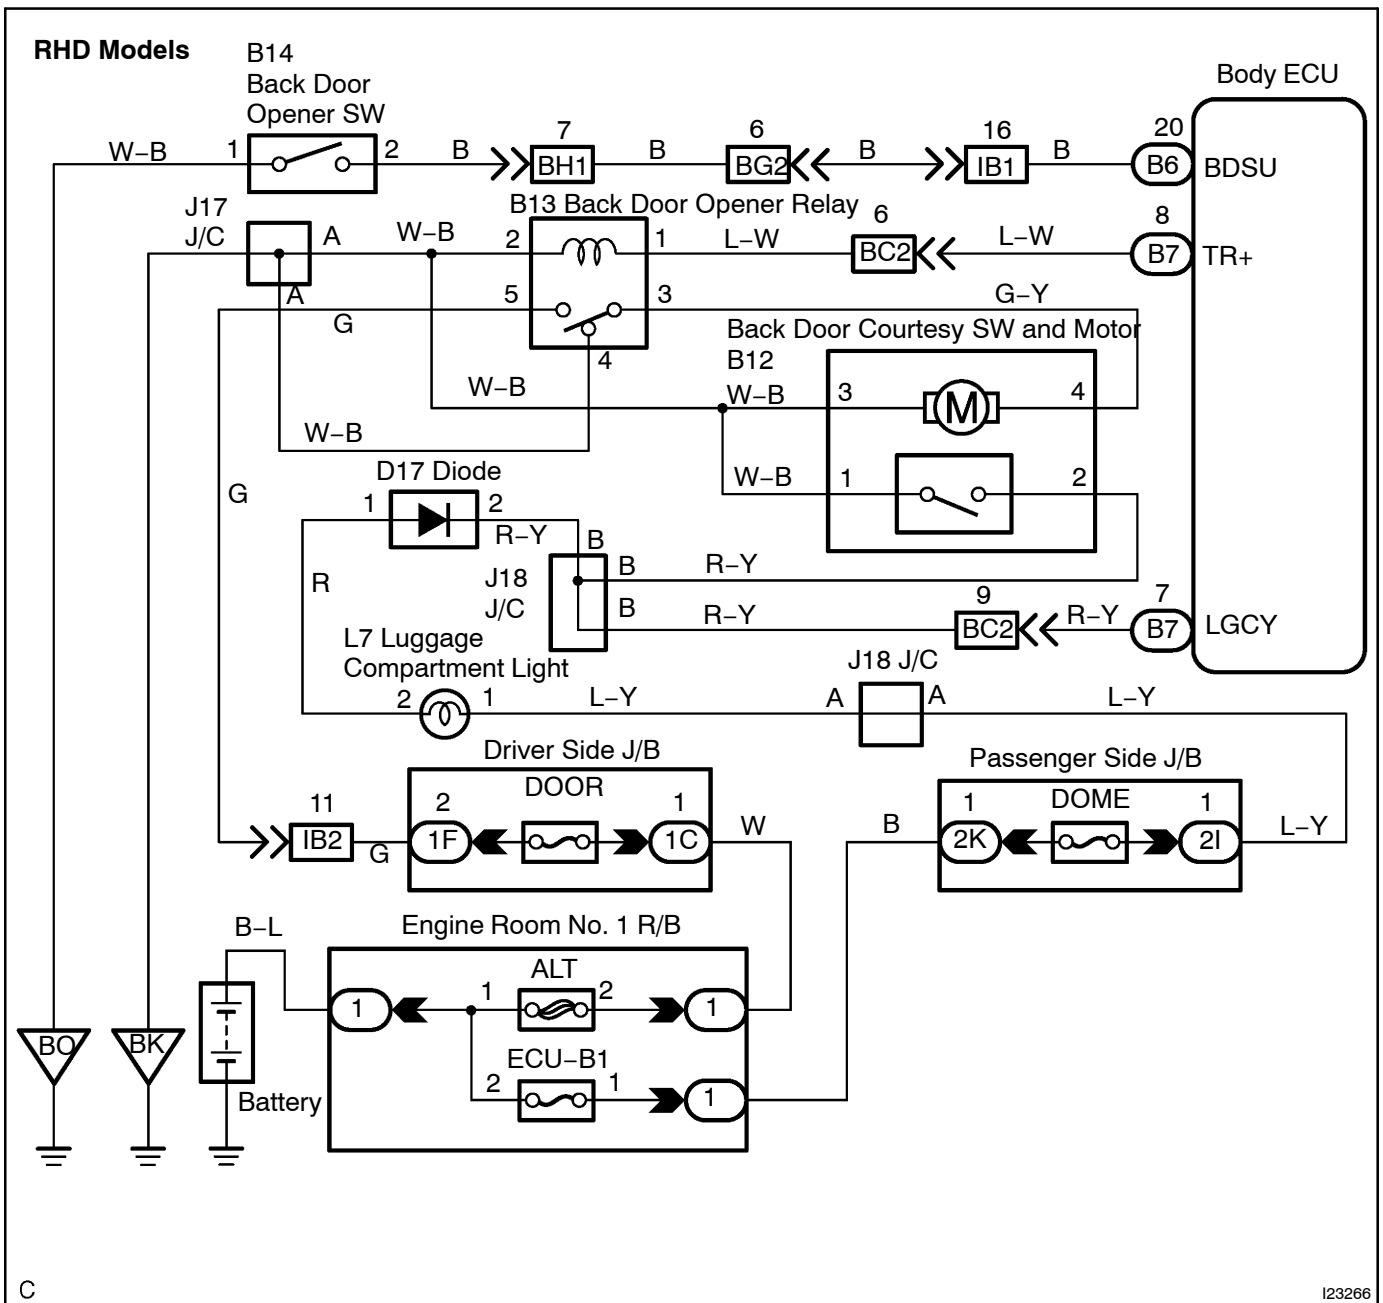

C

123266

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1 Check back door courtesy switch using hand-held tester.

PREPARATION:

Connect the hand-held tester to the DLC3.

CHECK:

Check the back door courtesy switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-555)

NG

2 Check back door courtesy switch (See page BE-22).

NG

Replace the back door courtesy switch.

OK

3 Check wire harness and connector between back door courtesy switch and Body ECU.

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-555)