


FUEL TANK AND LINE

FI026-03

COMPONENTS

CAUTION:

- Always use new gasket when replacing the fuel tank or component parts.
- Apply proper torque to all parts tightened.

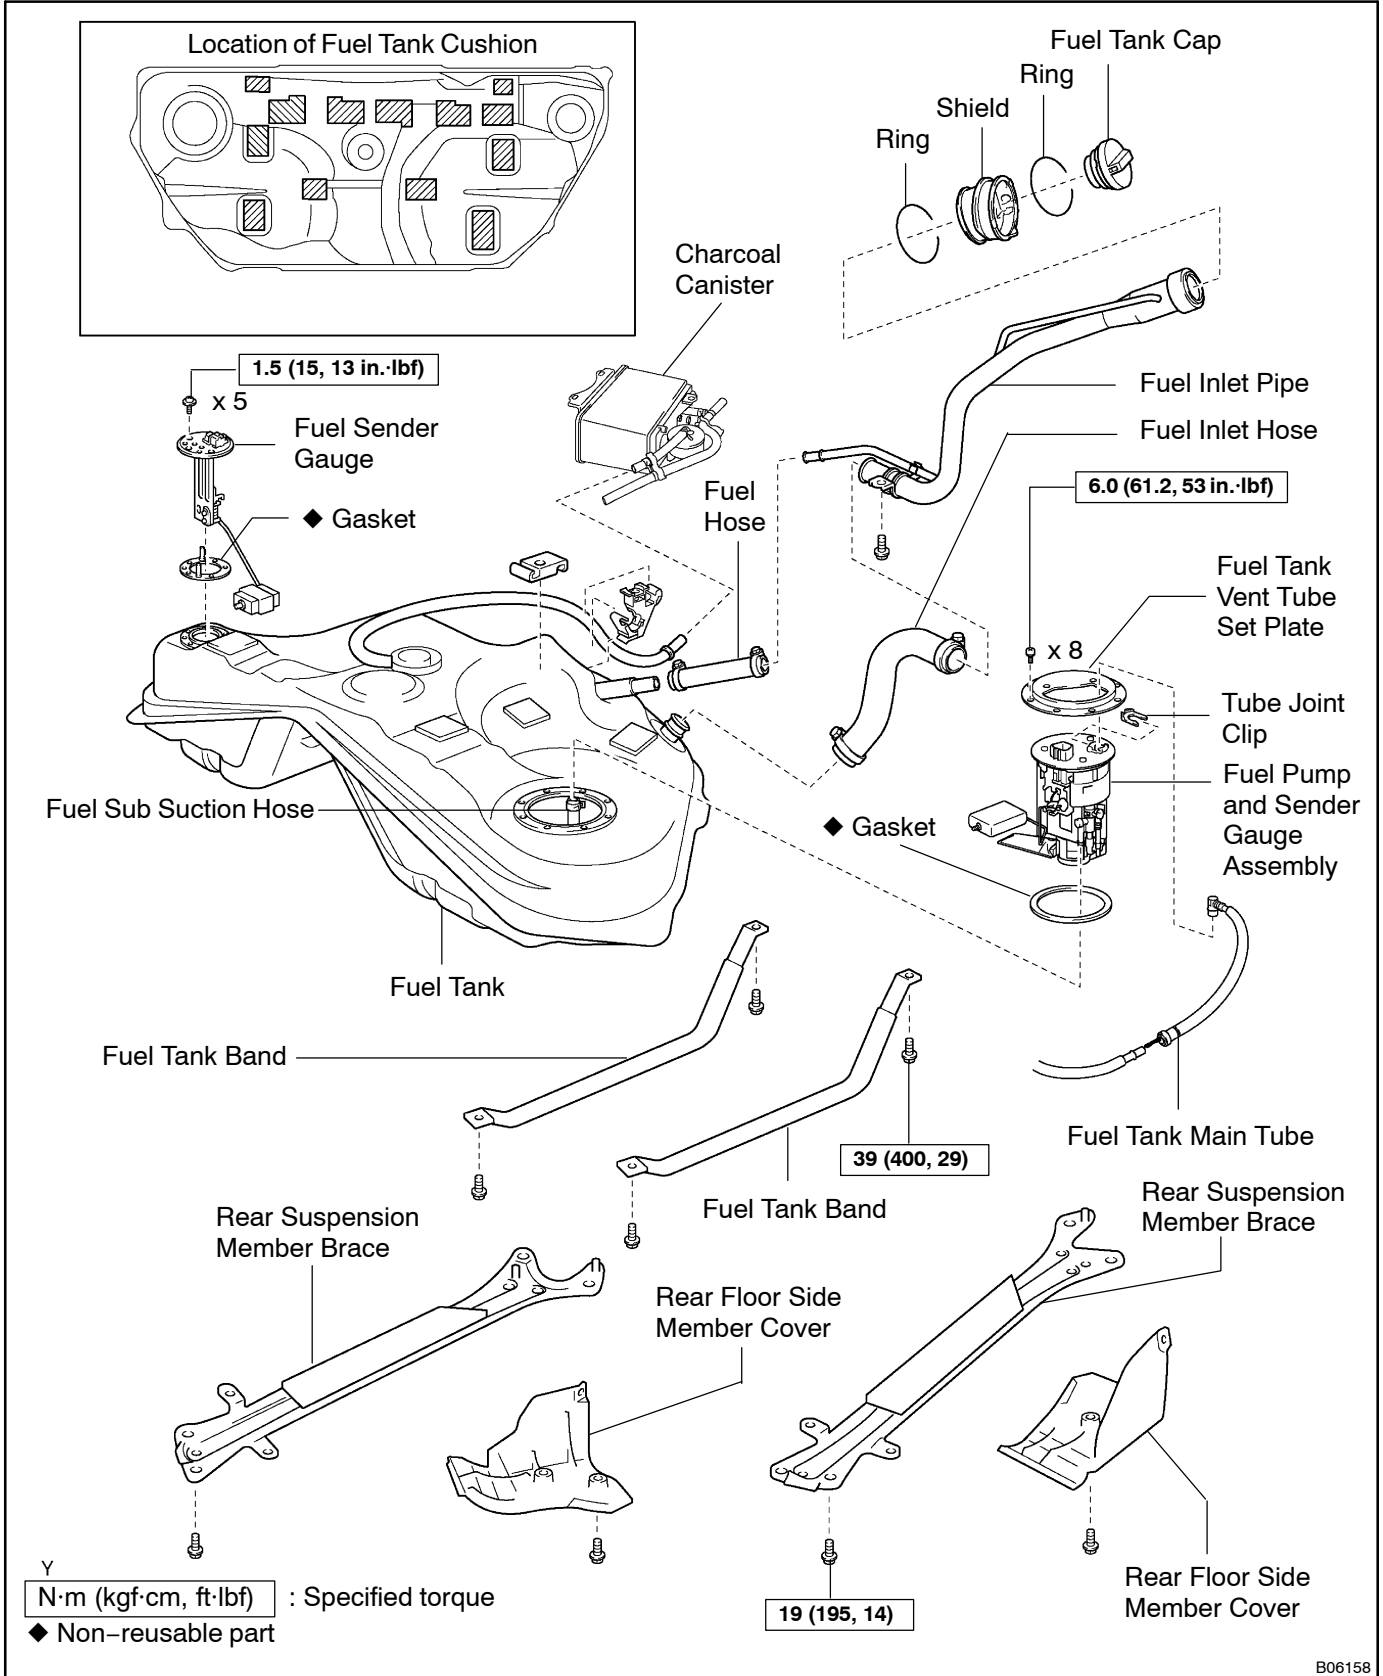

B06158