


## FUEL PUMP RELAY INSPECTION


SF1LG-02

1. REMOVE RELAY BOX COVER
2. REMOVE FUEL PUMP RELAY (Marking: FUEL PUMP)

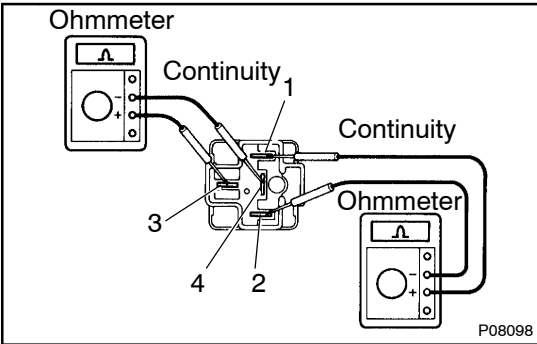

### 3. INSPECT FUEL PUMP RELAY CONTINUITY

- (a) Using an ohmmeter, check that continuity exists between terminals 1 and 2.  
If no continuity exists, replace the relay.
- (b) Check that there is continuity between terminals 3 and 4.  
If no continuity exists, replace the relay.

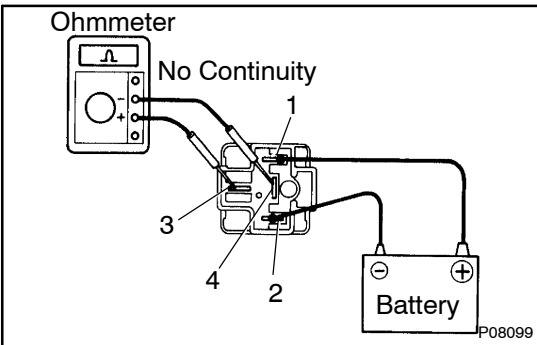

### 4. INSPECT FUEL PUMP RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 2.
  - (b) Using an ohmmeter, check that no continuity exists between terminals 3 and 4.  
If continuity exists, replace the relay.
5. REINSTALL FUEL PUMP RELAY