

INSPECTION

1. REMOVE ENGINE ECU
2. INSPECT ENGINE ECU (See page DI-22)
3. REINSTALL ENGINE ECU