
FUEL CUT RPM INSPECTION

SF0OH-08


1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

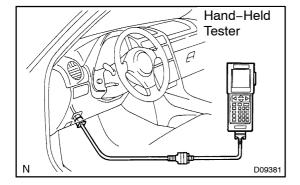

2. CONNECT LEXUS HAND-HELD TESTER TO DLC3

- (a) Connect the hand-held tester to the DLC3.
- (b) Please refer to the hand-held tester operator's manual for further details.

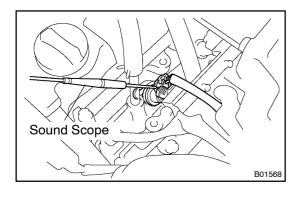

3. INSPECT FUEL CUT-OFF OPERATION

- (a) Increase the engine speed to at least 3,000 rpm.
- (b) Check for injector operating noise.
- (c) Check that when the throttle lever is released, injector operation noise stops momentarily and then resumes.

HINT:

Measure with the A/C OFF.

Fuel return rpm: 1,000 rpm

4. DISCONNECT HAND-HELD TESTER OR OBDII SCAN TOOL