




 

 




# AUTOMATIC TRANSMISSION

## SST (Special Service Tools)

PP3QV-01

	09032-00100	Oil Pan Seal Cutter	Oil pan
	09023-12700	Union Nut Wrench 17mm	
	09308-00010	Oil Seal Puller	Extension housing rear oil seal
	09325-20010	Transmission Oil Plug	Extension housing rear oil seal
	09350-30020	TOYOTA Automatic Transmission Tool Set	
	(09351-32020)	Stator Stopper	
	09843-18040	Diagnosis Check Wire No.2	
	09992-00095	Automatic Transmission Oil Pressure Gauge Set	
	(09992-00231)	Adaptor C	
	(09992-00271)	Gauge Assy	