



 
 


 
 
 
 

 

 

 
 
 
 












 
 
 
 
 
 
 
STEERING**SST (Special Service Tools)**

PP3QY-01





	09023-38200	Union Nut Wrench 12mm	PS gear
	09023-38400	Union Nut Wrench 14mm	PS gear
	09216-00041	V-Ribbed Belt Tensioner Wrench	
	09608-04031	Front Hub Inner Bearing Cone Replacer	
	09612-00012	Rack & Pinion Steering Rack Housing Stand	PS gear
	09612-22011	Tilt Handle Bearing Replacer	Tilt steering column
	09616-00011	Steering Worm Bearing Adjusting Socket	PS gear
	09630-24014	Steering Rack Oil Seal Tool Set	PS gear
	(09620-24051)	Seal Ring Tool	
	09631-10030	Oil Seal Remover	PS vane pump
	09631-12071	Steering Rack Oil Seal Test Tool	PS gear
	09631-20060	Bearing Guide Nut Wrench	PS gear

PREPARATION - STEERING

	09631-20081	Seal Ring Tool	PS gear
	09631-20090	Cylinder End Stopper Nut Wrench	PS gear
	09631-33010	Steering Rack Cover "1"	PS gear
	09640-10010	Power Steering Pressure Gauge Set	Power steering fluid
	(09641-01010)	Gauge Assy	
	(09641-01030)	Attachment B	
	(09641-01060)	Attachment E	
	09922-10010	Variable Open Wrench	PS gear
	09950-60010	Replacer Set	
	(09951-00180)	Replacer 18	PS gear
	(09951-00240)	Replacer 24	PS gear
	(09951-00250)	Replacer 25	PS gear
	(09951-00280)	Replacer 28	PS gear

	<p>(09951-00310) Replacer 31</p>	<p>PS gear</p>
	<p>(09951-00320) Replacer 32</p>	<p>PS vane pump PS gear</p>
	<p>(09951-00330) Replacer 33</p>	<p>PS vane pump</p>
	<p>(09951-00340) Replacer 34</p>	<p>PS gear</p>
	<p>(09951-00360) Replacer 36</p>	<p>PS gear</p>
	<p>(09951-00430) Replacer 43</p>	<p>PS gear</p>
	<p>(09952-06010) Adapter</p>	<p>PS gear</p>
	<p>09950-50013 Puller C Set</p>	<p>Tilt steering column</p>
	<p>(09951-05010) Hanger 150</p>	
	<p>(09952-05010) Slide Arm</p>	
	<p>(09953-05020) Center Bolt 150</p>	
	<p>(09954-05021) Claw No.2</p>	
	<p>09950-70010 Handle Set</p>	

PREPARATION - STEERING

	(09951-07100) Handle 100	PS vane pump PS gear
	(09951-07150) Handle 150	PS gear
	(09951-07200) Handle 200	PS gear
	(09951-07360) Handle 360	PS gear