


## REMOVAL

1. REMOVE NO.1 ENGINE UNDER COVER
2. REMOVE LH FRONT FLOOR CENTER COVER
3. REMOVE NO.2 ENGINE UNDER COVER
4. REMOVE NO. 1 REAR FLOOR BOARD
5. REMOVE EXHAUST PIPE ASSEMBLY
  - (a) Disconnect the heated oxygen sensor.
  - (b) Remove the 3 bolts, retainer and nut from the exhaust manifold.
  - (c) Disconnect the exhaust pipe assembly from the 4 O-rings.
  - (d) Remove the exhaust pipe assembly.
  - (e) Remove the 2 gaskets from exhaust pipe assembly.

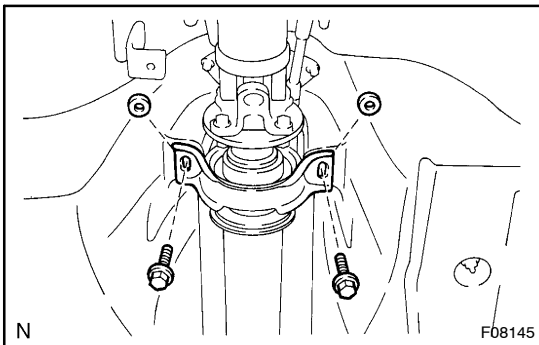

### 6. REMOVE PROPELLER SHAFT


- (a) Remove the 2 center support bearing set bolts and adjusting washers.

#### HINT:


Production vehicles are not equipped with adjusting washers.

#### NOTICE:

**When removing the set bolts, support the center support bearing by hand so that the transmission and intermediate shaft, and propeller shaft and differential, remain in a straight line.**

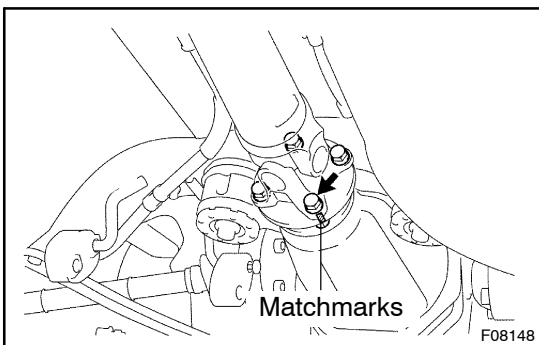

- (b) Place matchmarks on the differential companion flange and propeller shaft.
- (c) Remove the 4 bolts, washers and nuts.
- (d) Pull the yoke from the transmission.

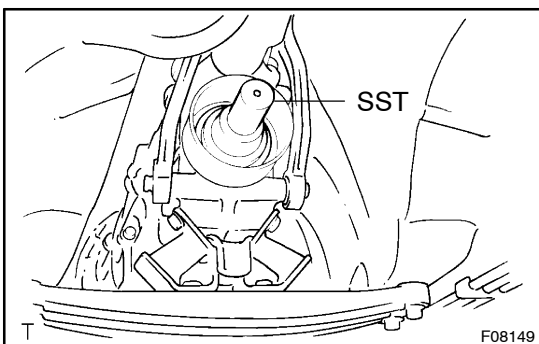

- (e) Install SST in the transmission to prevent oil leakage.  
SST 09325-40010