


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
- Never use any airbag parts removed from another vehicle. When replacing parts, replace them with new ones.

1. REMOVE ROOF HEADLINING

Pages for reference	See page
Sedan	BO-72
Wagon	BO-80

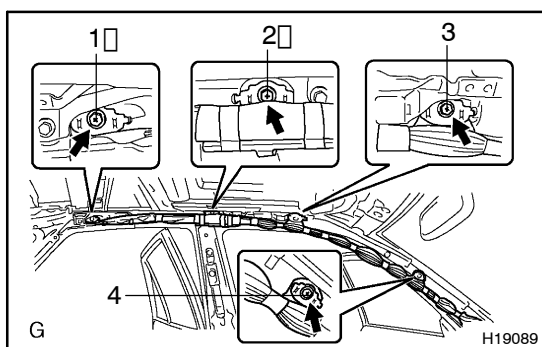

2. In case without removing inflator:

REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY

- (a) In the order shown in the illustration, remove the bolts and deployment section of the curtain shield airbag assembly.

- (b) Put the removed curtain shield airbag assembly into a clear plastic bag and put it on the instrument panel.


CAUTION:


Never disassemble the curtain shield airbag assembly.

NOTICE:


The clear plastic bag is not reusable.

3. REMOVE INSTRUMENT PANEL (See page [BO-59](#))

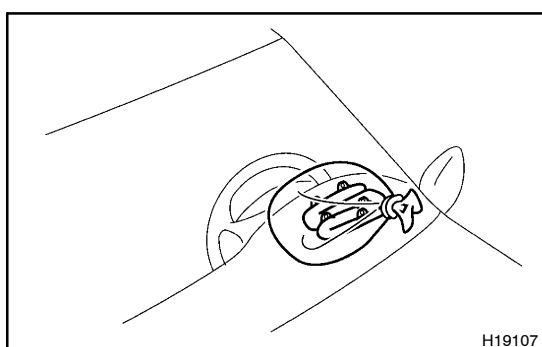


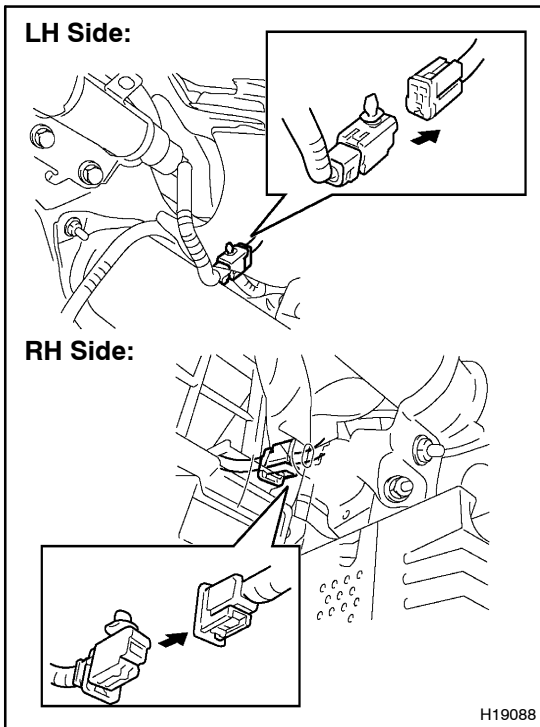

- 4. REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY**
- Disengage the clamp and remove the curtain shield airbag assembly connector.
 - Disconnect the connector for curtain sealed airbag assembly.
 - Disengage the claw and disconnect the vehicle wire harness from the bracket of the curtain shield airbag assembly.

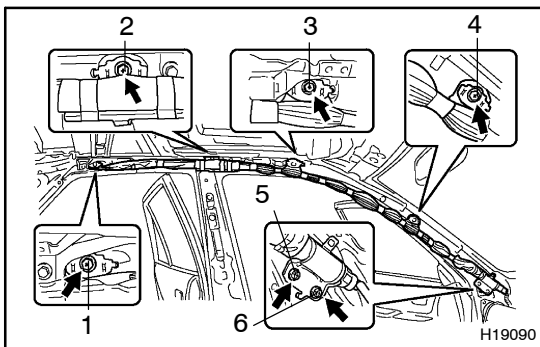

- In the order shown in the illustration, remove the bolts and curtain shield airbag assembly.

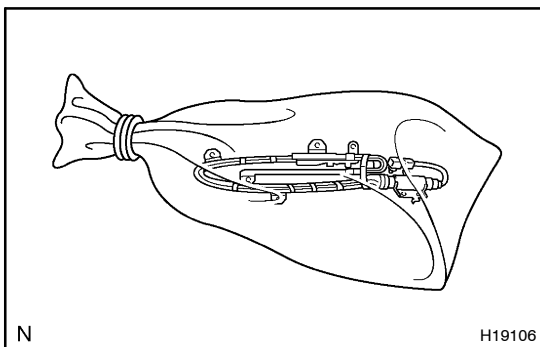

- Put the removed curtain shield airbag assembly into a clear plastic bag and keep it in a safe place.

CAUTION:

Never disassemble the curtain shield airbag assembly.

NOTICE:

The protection bag is not reusable.