



INSTALLATION

INSTALL FRONT AIRBAG SENSOR

- (a) Install the front airbag sensor with the arrow on the sensor facing toward the front of the vehicle.

Torque: 8.5 N·m (86.7 kgf·cm, 75 in.·lbf)

NOTICE:

- **Connection of the connector is done after the sensor has been installed.**
 - **Make sure the sensor is installed with the specified torque.**
 - **If the sensor has been dropped, or there are cracks, dents or other defects in the case, brackets or connector, replace the removed sensor with a new one.**
 - **The front sensor is equipped with an electrical connection check mechanism. Be sure to lock this mechanism securely when connecting the connector. If the connector is not securely locked, a malfunction code will be detected by the diagnostic system.**
- (b) Connect the front airbag sensor connector.