INSPECTION

1. Vehicle not involved in collision:

INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

Do a diagnostic system check (See page DI-413).

2. Vehicle involved in collision and airbag is not deployed: INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

Do a diagnostic system check (See page DI-413).

3. Vehicle involved in collision and airbag is deployed: INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

Replace the side airbag sensor assembly (See page RS-32).