


## INSTALLATION

### NOTICE:

- **Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.**
- **Never reuse the side and curtain shield airbag sensor assembly involved in a collision when the airbag has deployed.**
- **Never repair a sensor in order to reuse it.**

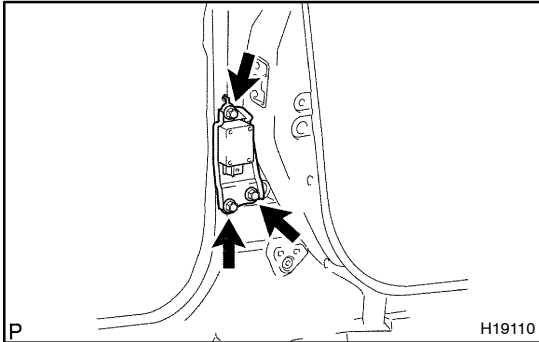

### 1. INSTALL SIDE AND CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY

- (a) Install the side and curtain shield airbag sensor assembly with the 3 bolts.

**Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)**

- (b) Connect the side and curtain shield airbag sensor assembly connector.

### NOTICE:

- **Connection of the connector is done after the sensor assembly has been installed. Make sure the sensor assembly is installed with the specified torque.**
  - **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
  - **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
  - **After installation, shake the sensor assembly to check that there is no looseness.**
2. **INSTALL FRONT SEAT OUTER BELT ASSEMBLY**  
(See Pub. No. RM684E on page BO-147)
  3. **INSTALL CENTER PILLAR LOWER GARNISH**
  4. **INSTALL FRONT AND REAR DOOR INSIDE SCUFF PLATES**