



REMOVAL


1. REMOVE REAR WHEEL
2. REMOVE LUGGAGE COMPARTMENT TRIM NO. 2 COVER

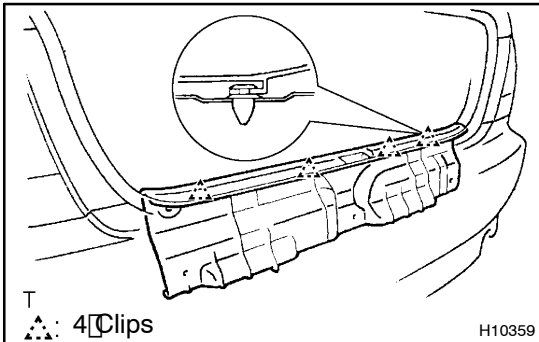

3. REMOVE LUGGAGE COMPARTMENT TRIM REAR COVER
4. REMOVE LUGGAGE COMPARTMENT FLOOR HOOKS

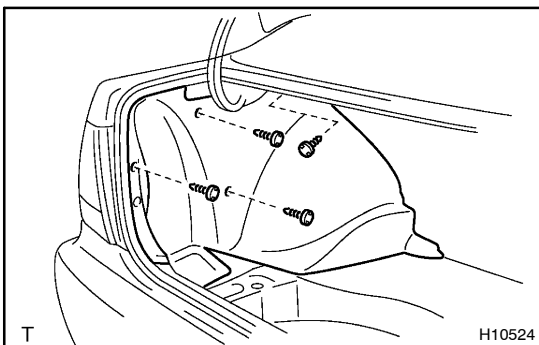

5. REMOVE LUGGAGE COMPARTMENT TRIM SIDE COVER
6. REMOVE NO. 2 LOWER SUSPENSION ARM (See page SA-97)

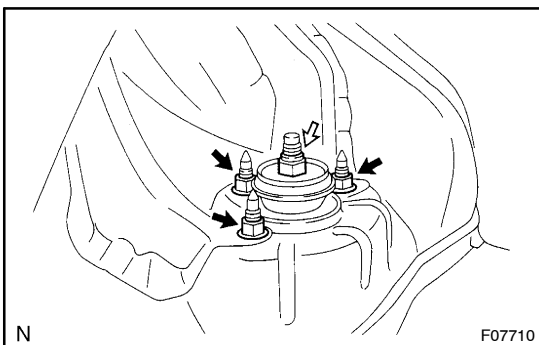

7. REMOVE REAR SHOCK ABSORBER WITH COIL SPRING

(a) Loosen the nut in the center of the suspension support.


NOTICE:

Do not remove it.

HINT:

If not disassembling the shock absorber, it is not necessary to loosen the nut.

(b) Remove the 3 nuts from the body.

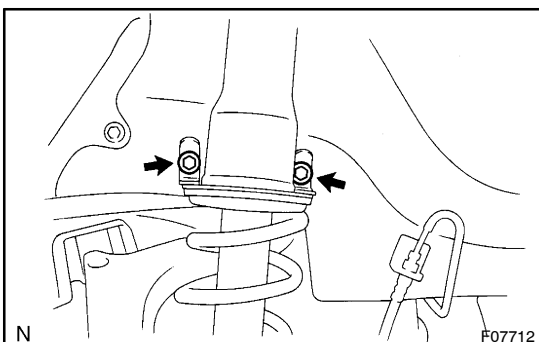

(c) Remove the 2 bolts and shock absorber with the coil spring from the body.