



DISASSEMBLY

REMOVE SUSPENSION SUPPORT AND COIL SPRING

- (a) Using SST, compress the coil spring.
SST 09727-30021 (09727-00010, 09727-00021,
09727-00031)

NOTICE:

Do not use an impact wrench. It will damage the SST.

- (b) Remove the suspension support nut.
(c) Remove the washer, cushion, suspension support, upper insulator, coil spring, collar, cushion and spring bumper.