

## INSTALLATION

### 1. INSTALL REAR SHOCK ABSORBER WITH COIL SPRING

(a) Install the suspension support to the body with the 3 nuts.

**Torque: 64 N·m (650 kgf·cm, 47 ft·lbf)**

(b) Connect the shock absorber with coil spring to the body with the 2 bolts.

**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**

(c) Torque the nut in the center of the suspension support.

**Torque: 28 N·m (280 kgf·cm, 21 ft·lbf)**

HINT:

If the shock absorber has not been disassembled, it is not necessary to torque the nut.

2. INSTALL NO. 2 LOWER SUSPENSION ARM (See page SA-99)

3. INSTALL LUGGAGE COMPARTMENT TRIM SIDE COVER

4. INSTALL LUGGAGE COMPARTMENT FLOOR HOOKS

5. INSTALL LUGGAGE COMPARTMENT TRIM REAR COVER

6. INSTALL LUGGAGE COMPARTMENT TRIM NO. 2 COVER

7. INSTALL REAR WHEEL

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**

8. CHECK REAR WHEEL ALIGNMENT (See page SA-8)