


## REMOVAL

1. REMOVE REAR WHEEL
2. REMOVE REAR SEAT CUSHION (See page BO-112)
3. REMOVE TONNEAU COVER ASSEMBLY
4. REMOVE REAR SEAT BELT ASSEMBLY OUTER
5. REMOVE SIDE SEATBACK ASSEMBLY (See page BO-112)
6. REMOVE REAR FLOOR BOARD NO. 4
  - (a) Remove the seat back board carpets.
  - (b) Remove the 2 bolts and rear floor board.
7. REMOVE DECK FLOOR BOX FRONT
  - (a) Remove the 2 bolts and 2 rope hook assemblies.
  - (b) Remove the deck floor box front.
8. REMOVE DECK BOARD NO. 2
 

Remove the rear floor board No. 2, No. 3 and deck board No. 2.
9. REMOVE SPARE WHEEL COVER TRAY
 

Remove the deck side trim box LH, RH and the spare wheel cover tray.

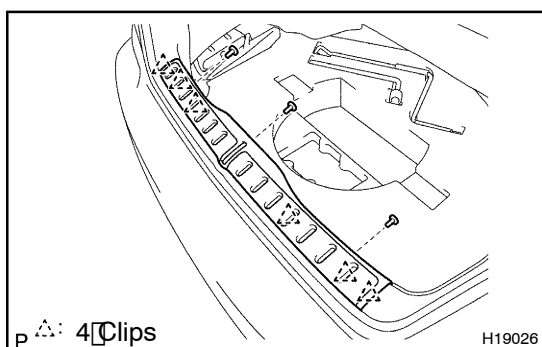

10. REMOVE REAR FLOOR FINISH PLATE
  - (a) Remove the 2 bolts and 2 rope hook assemblies.
  - (b) Remove the 3 clips.
  - (c) Using a screwdriver, remove the rear floor finish plate.

HINT:

Tape the screwdriver tip before use.

11. REMOVE DECK TRIM SIDE PANEL ASSEMBLY (See page BO-80)

12. REMOVE NO. 2 LOWER SUSPENSION ARM (See page SA-97)

13. REMOVE REAR SHOCK ABSORBER WITH COIL SPRING

- (a) Loosen the nut in the center of the suspension support.

**NOTICE:**

**Do not remove it.**

HINT:

If not disassembling the shock absorber, it is not necessary to loosen the nut.

- (b) Remove the 3 nuts from the body.

- (c) Remove the 2 bolts and shock absorber with the coil spring from the body.

