



## DISASSEMBLY

### REMOVE SUSPENSION SUPPORT AND COIL SPRING

- (a) Using SST, compress the coil spring.  
SST 09727-30021 (09727-00010, 09727-00021, 09727-00031)

#### NOTICE:

**Do not use an impact wrench. It will damage the SST.**

- (b) Remove the suspension support nut.  
(c) Remove the washer, cushion, suspension support, upper insulator, coil spring, collar, cushion and spring bumper.