

INSTALLATION

1. INSTALL REAR SHOCK ABSORBER WITH COIL SPRING


- (a) Install the suspension support to the body with the 3 nuts.
Torque: 64 N·m (650 kgf·cm, 47 ft·lbf)
- (b) Connect the shock absorber with coil spring to the body with the 2 bolts.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)
- (c) Torque the nut in the center of the suspension support.
Torque: 28 N·m (280 kgf·cm, 21 ft·lbf)

HINT:

If the shock absorber has not been disassembled, it is not necessary to torque the nut.

2. INSTALL NO. 2 LOWER SUSPENSION ARM (See page SA-99)

3. INSTALL DECK TRIM SIDE PANEL ASSEMBLY (See page BO-85)

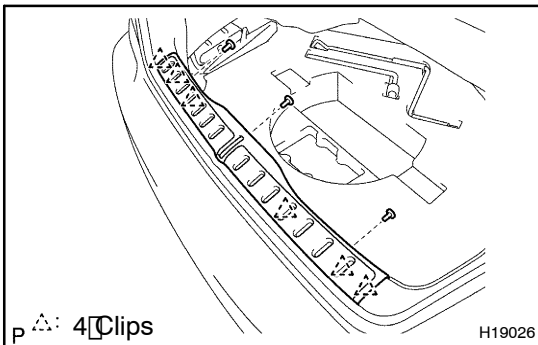

4. INSTALL REAR FLOOR FINISH PLATE

- (a) Install 3 clips and rear floor finish plate.
- (b) Install the 2 bolts and 2 rope hook assemblies.

5. INSTALL SPARE WHEEL COVER TRAY


Install the deck side trim board LH, RH and the spare wheel cover tray.

6. INSTALL DECK BOARD NO. 2

Install the rear floor board No. 2, No. 3 and deck board No. 2.

7. INSTALL DECK FLOOR BOX FRONT

- (a) Install the deck floor box front.
- (b) Install the 2 bolts and 2 rope hook assemblies.

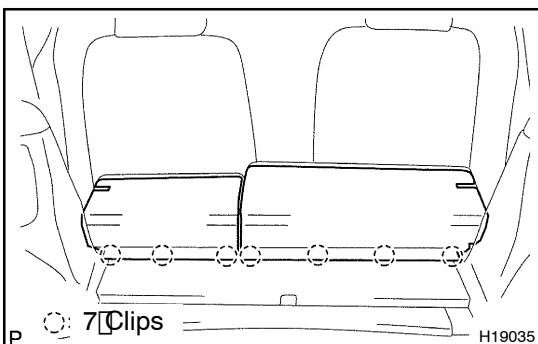

8. INSTALL REAR FLOOR BOARD NO. 4

Install the rear floor board No. 4 with the 2 bolts.

9. INSTALL SIDE SEATBACK ASSEMBLY (See page BO-117)

10. INSTALL REAR SEAT BELT ASSEMBLY OUTER

11. INSTALL TONNEAU COVER ASSEMBLY

12. INSTALL REAR SEAT CUSHION (See page BO-117)

13. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

14. CHECK REAR WHEEL ALIGNMENT (See page SA-8)