


## REMOVAL

### REMOVE STARTER

- (a) Remove the rubber cap and nut, and disconnect the starter wire.
- (b) Disconnect the starter connector.

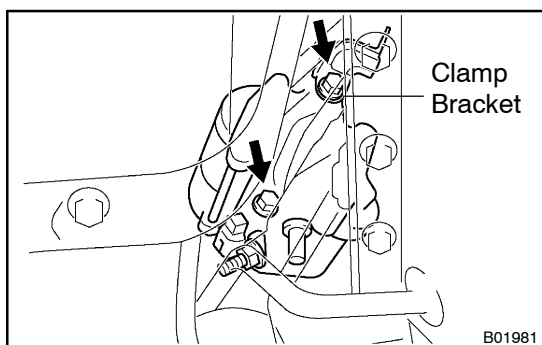

- (c) Remove the 2 bolts and starter.

**Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)**

#### HINT:

At time of the installation, please refer to the following item.  
When installing the upper bolt, tighten it together with the clamp bracket.