


STARTER RELAY INSPECTION

ST056-04

INSPECT STARTER RELAY

(a) Inspect the relay continuity.

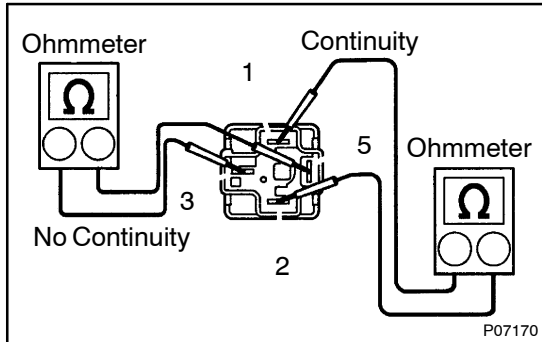


(1) Check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

(2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

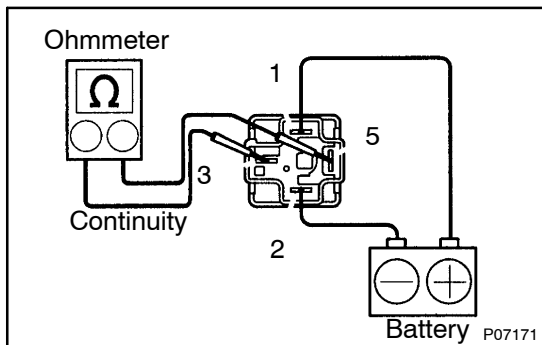

(b) Inspect the relay operation.

(1) Apply battery positive voltage across terminals 1 and 2.

(2) Check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.