

BLOWER MOTOR

ON-VEHICLE INSPECTION


1. INSPECT COOLING UNIT MOTOR SUB-ASSEMBLY W/FAN

- (a) Remove the cooling unit motor sub-assembly w/ fan.
- (b) Connect the negative (-) lead connected to terminal 1 of the blower motor connector, the positive (+) lead to terminal 2.

OK:

Blower motor operates smoothly.

**Blower Motor Connector
Front View:**

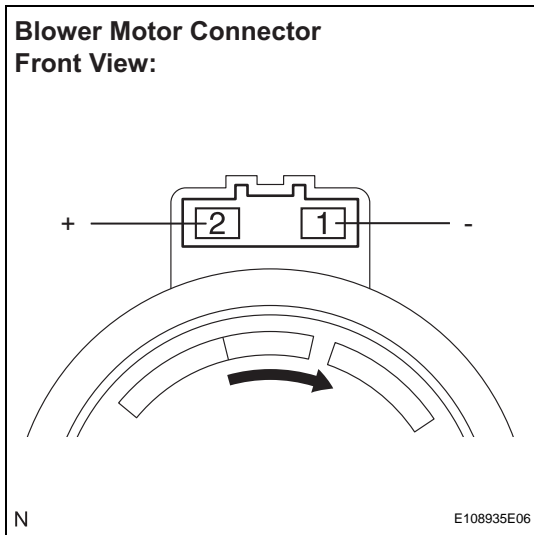

AC