



Air Inlet Control Servo Motor
Connector Front View:

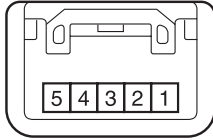

RECIRCULATION

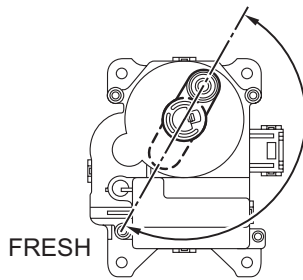

N

E109217E07

AIR INLET CONTROL SERVO MOTOR

INSPECTION

1. INSPECT AIR INLET CONTROL SERVO MOTOR

- (a) Remove the air inlet control servo motor.
- (b) Connect the positive (+) lead from the battery to terminal 5 and negative (-) lead to terminal 4, then check that the lever turns to "FRESH" side smoothly.
- (c) Connect the positive (+) lead from the battery to terminal 4 and negative (-) lead to terminal 5, then check that the lever turns to "RECIRCULATION" side smoothly.

NOTICE:

While using the battery during inspection, do not bring the positive and negative tester probes too close to each other as a short circuit may occur.

If the operation is not as specified, replace the air inlet control servo motor.

AC