
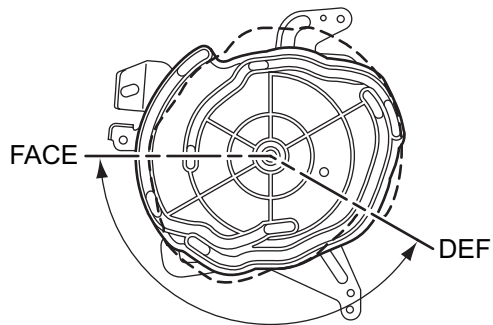


Air Outlet Control Servo Motor
Connector Front View:

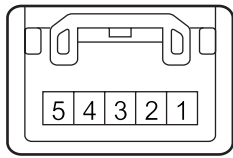

H

E108927E09

AIR OUTLET CONTROL SERVO MOTOR

INSPECTION

1. INSPECT AIR OUTLET CONTROL SERVO MOTOR

- Remove the air outlet control servo motor.
- Connect the positive (+) lead from the battery to terminal 4 and negative (-) lead to terminal 5, then check that the lever turns to "DEF" position.
- Connect the positive (+) lead from the battery to terminal 5 and negative (-) lead to terminal 4, then check that the lever turns to "FACE" position.

NOTICE:

While using the battery during inspection, do not bring the positive and negative tester probes too close to each other as a short circuit may occur.

If the operation is not as specified, replace the air outlet control servo motor.