
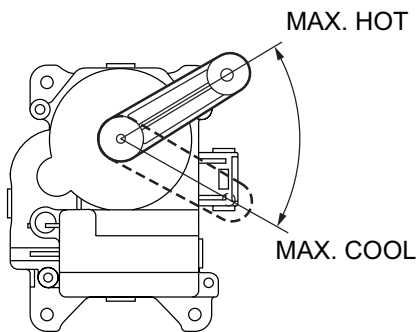


Air Mix Control Servo Motor  
Connector Front View:

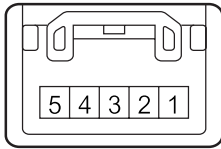

H

E109236E09

## AIR MIX CONTROL SERVO MOTOR (for Front Passenger Side)

### INSPECTION

#### 1. INSPECT AIR MIX CONTROL SERVO MOTOR

- (a) Remove the air mix control servo motor.
- (b) Connect the positive (+) lead from the battery to terminal 4 and negative (-) lead to terminal 5, then check that the lever turns to "COOL" side smoothly.
- (c) Connect the positive (+) lead from the battery to terminal 5 and negative (-) lead to terminal 4, then check that the lever turns to "HOT" side smoothly.

#### NOTICE:

**While using the battery during inspection, do not bring the positive and negative tester probes too close to each other as a short circuit may occur.**

If the operation is not as specified, replace the air mix control servo motor.

AC