


## A/C Room Temperature Sensor:

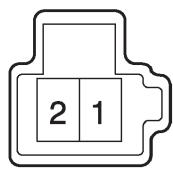

C

I036142E02


# ROOM TEMPERATURE SENSOR

## ON-VEHICLE INSPECTION

## 1. INSPECT A/C ROOM TEMPERATURE SENSOR

- Remove the A/C room temperature sensor.
- Disconnect the connector from the A/C room temperature sensor.
- Measure the resistance according to the value(s) in the table below.

AC

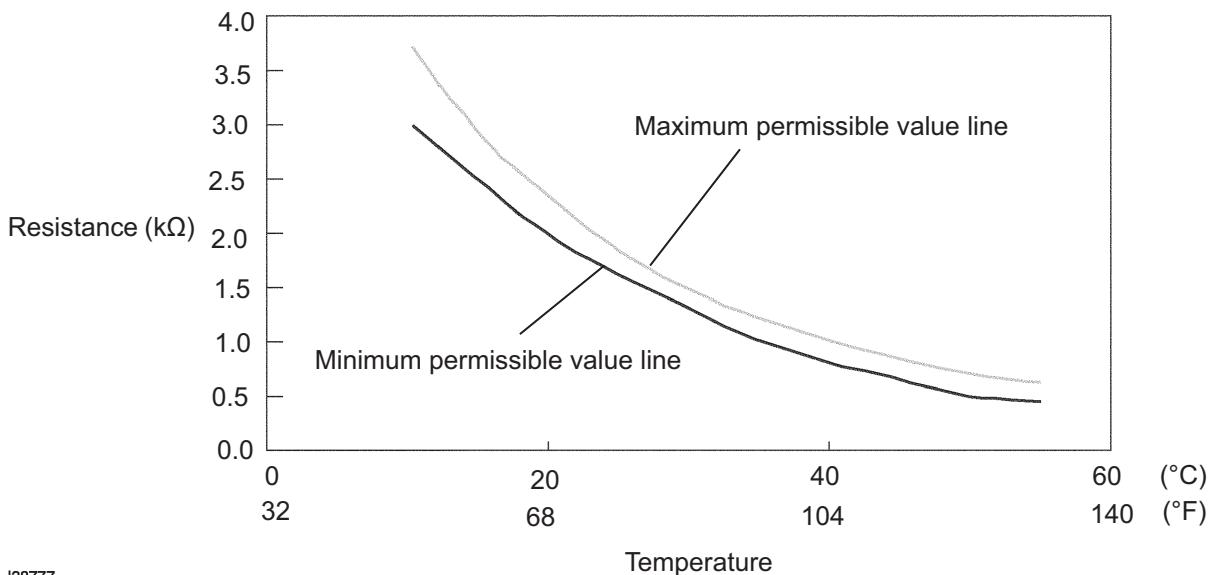I38777  
H

I040673E01

## Standard resistance

Tester connection	Condition	Specified condition
1 - 2	10°C (50°F)	3.00 to 3.73 kΩ
1 - 2	15°C (59°F)	2.45 to 2.88 kΩ
1 - 2	20°C (68°F)	1.95 to 2.30 kΩ
1 - 2	25°C (77°F)	1.60 to 1.80 kΩ
1 - 2	30°C (86°F)	1.28 to 1.47 kΩ
1 - 2	35°C (95°F)	1.00 to 1.22 kΩ
1 - 2	40°C (104°F)	0.80 to 1.00 kΩ
1 - 2	45°C (113°F)	0.65 to 0.85 kΩ
1 - 2	50°C (122°F)	0.50 to 0.70 kΩ
1 - 2	55°C (131°F)	0.44 to 0.60 kΩ
1 - 2	60°C (140°F)	0.36 to 0.50 kΩ

## NOTICE:

- Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.
- When measuring, the sensor temperature must be the same as the ambient temperature.

**HINT:**

As the temperature increases, the resistance decreases (see the graph).

**AC**