



HEATER RELAY

ON-VEHICLE INSPECTION

1. INSPECT HEATER RELAY

- Remove the heater relay from the instrument panel J/B.
- Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester connection	Condition	Specified condition
3 - 4	Always	Below 1 Ω
3 - 4	When battery voltage applied to terminals 1 and 2	10 k Ω or higher
3 - 5	Always	10 k Ω or higher
3 - 5	When battery voltage applied to terminals 1 and 2	Below 1 Ω

If the resistance is not as specified, replace the heater relay.

NOTICE:

While using the battery during inspection, do not bring the positive and negative tester probes too close to each other as a short circuit may occur.