


CHECK MODE PROCEDURE

1. LIST OF OPERATION METHODS

By operating each of the A/C control switches as shown in the diagram below, it is possible to enter the diagnostic check mode.


Turn the IG switch to the ON position while pressing the AUTO and R/F switches simultaneously.

If both AUTO switch and R/F switch are not pressed at the same time.

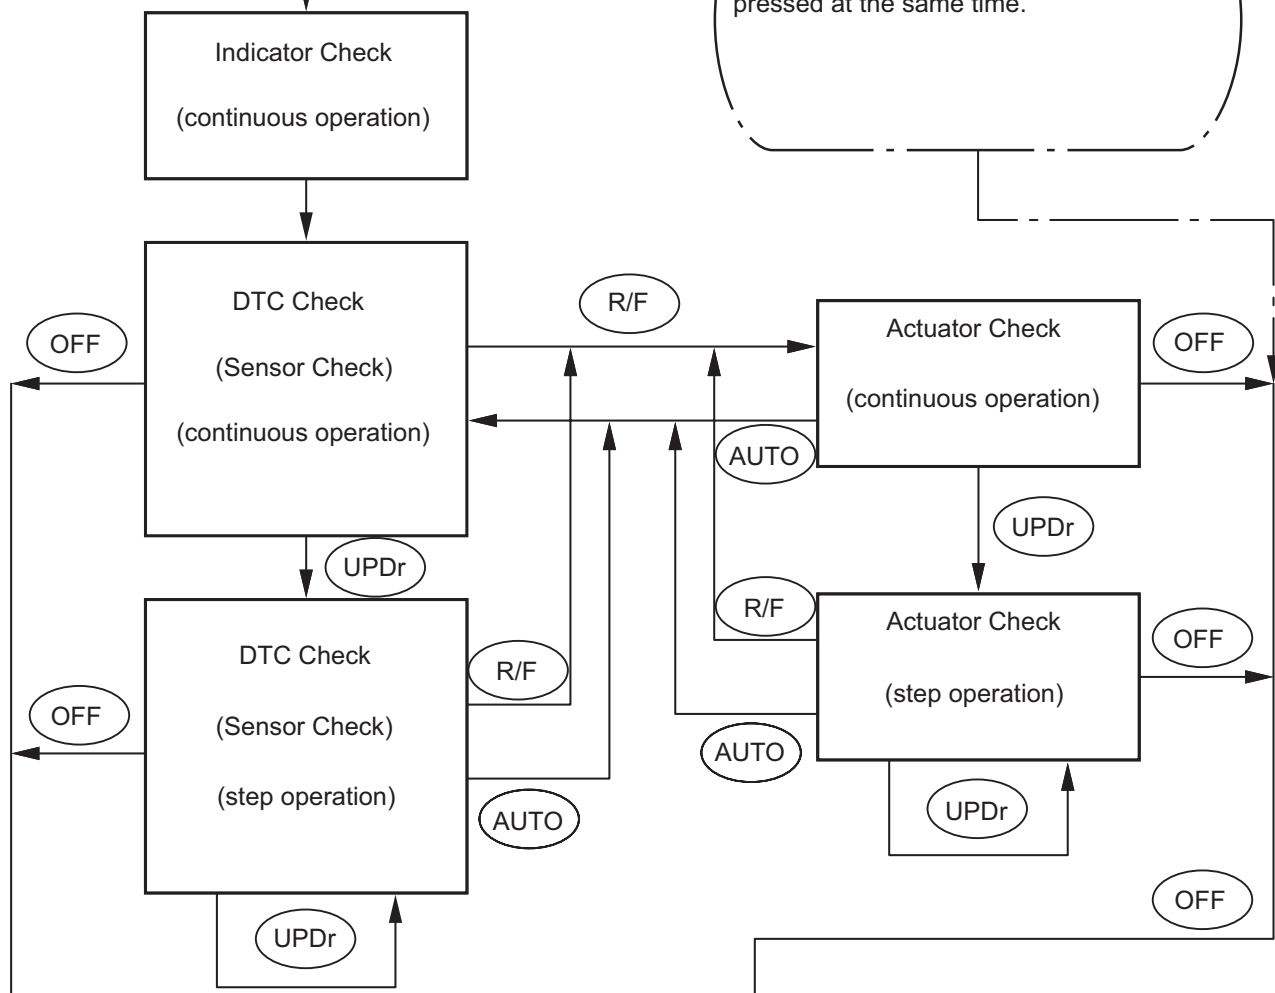


○ : Indicates a switch operation
 R/F: Recirculation/Fresh select switch
 UPDr: Driver side temperature up switch

w/o LEXUS Navigation System:

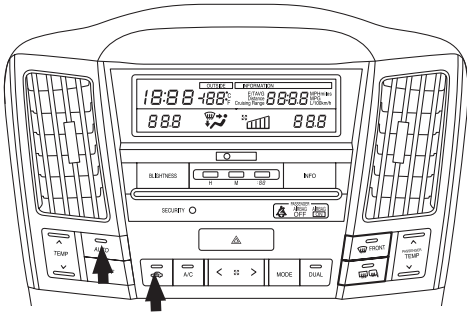

w/ LEXUS Navigation System:

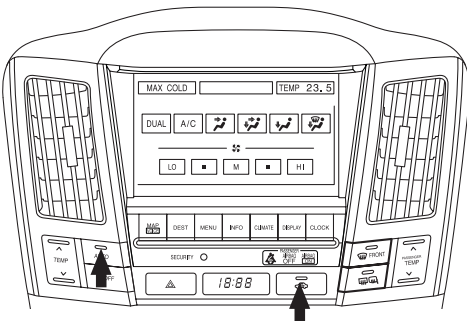

2. INDICATOR CHECK


- (a) Turn the ignition switch to the ON position while pressing the A/C control "AUTO" switch and "R/F" switch simultaneously.

AC


N

E109231E04


w/o LEXUS Navigation System:

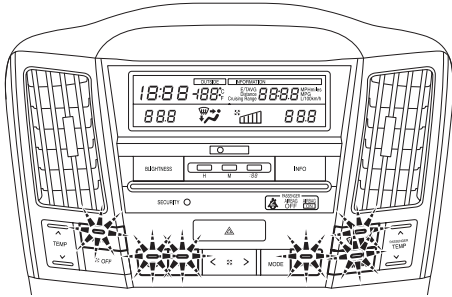

w/ LEXUS Navigation System:

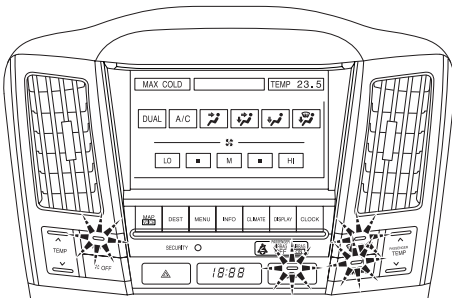

Indicator Blinking Pattern:

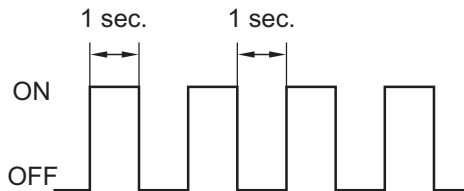

(b) Check that the indicators come on and go off 4 times in succession at 1 second intervals.

HINT:

- If a navigation system is installed, the indicator will blink and buzzer will sound.
- After the indicator check is completed, the system enters the DTC mode automatically.
- Press the "OFF" switch to cancel the check mode.