


PARK / NEUTRAL POSITION SWITCH



COMPONENTS

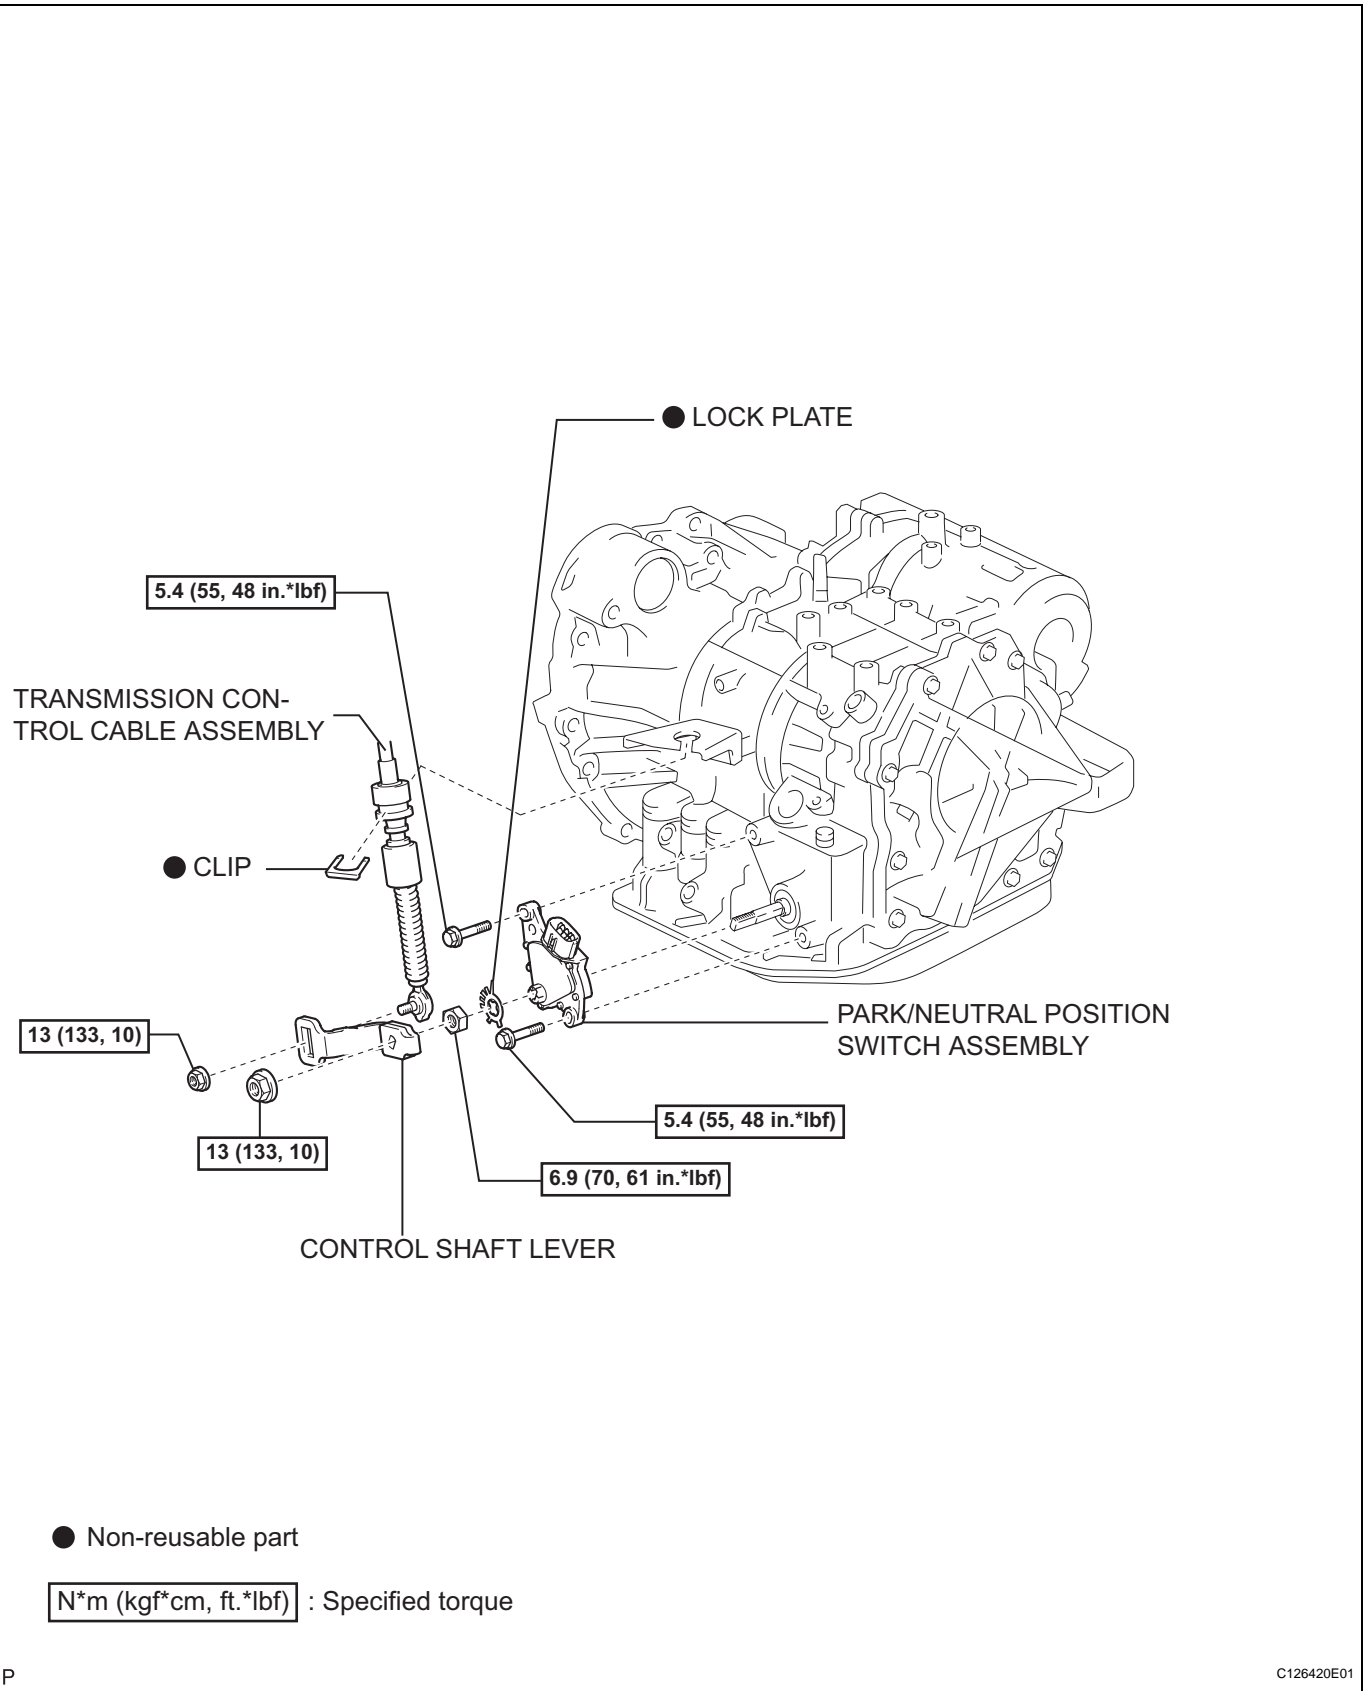

AX

REMOVAL


1. REMOVE BATTERY
2. REMOVE AIR CLEANER ASSEMBLY
HINT:
(See page ST-5)
3. REMOVE AIR CLEANER HOSE NO.1
HINT:
(See page ST-5)
4. REMOVE AIR CLEANER HOSE NO.2
HINT:
(See page ST-5)
5. REMOVE AIR CLEANER BRACKET
HINT:
(See page ST-5)
6. REMOVE AIR CLEANER INLET NO.1
HINT:
(See page ST-5)
7. REMOVE INTAKE AIR RESONATOR SUB-ASSEMBLY
HINT:
(See page ST-5)
8. SEPARATE TRANSMISSION CONTROL CABLE ASSEMBLY
 - (a) Remove the nut from the control shaft lever.
 - (b) Disconnect the control cable from the control shaft lever.

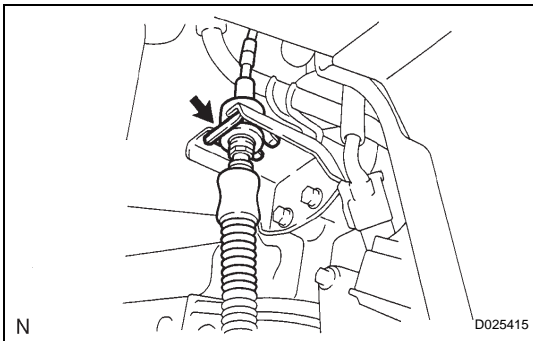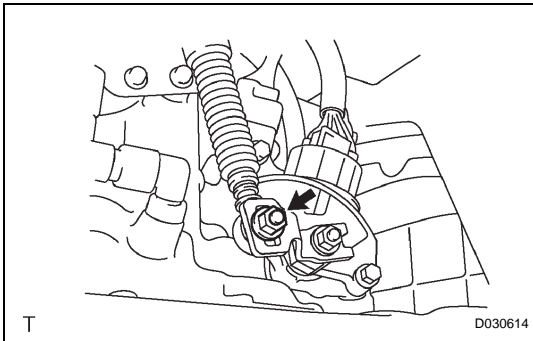

- (c) Remove the clip and disconnect the control cable from the control cable bracket.


NOTICE:

Do not hold the resin guide pipe.

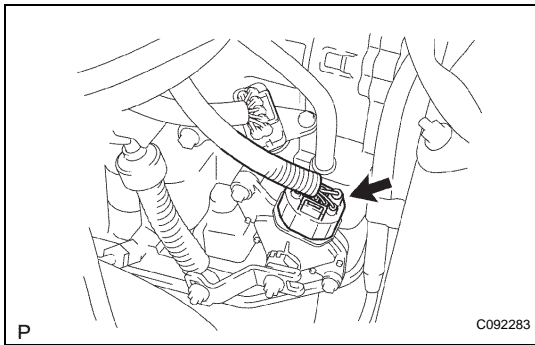


9. REMOVE PARK/NEUTRAL POSITION SWITCH ASSEMBLY


(a) Disconnect the park/neutral position switch connector.

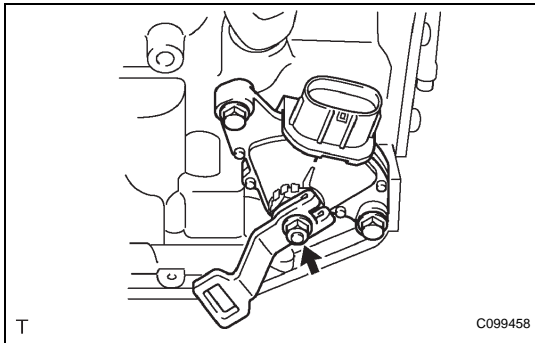


(b) Remove the nut, washer and control shaft lever.

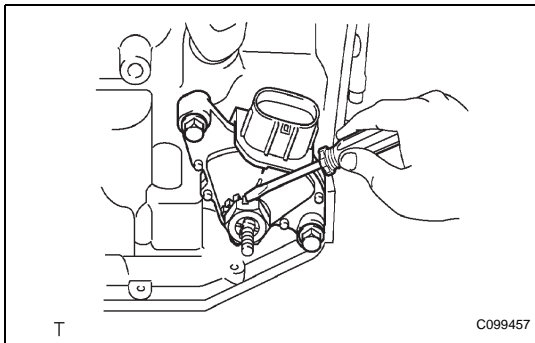

(c) Using a screwdriver, pry up the lock plate.

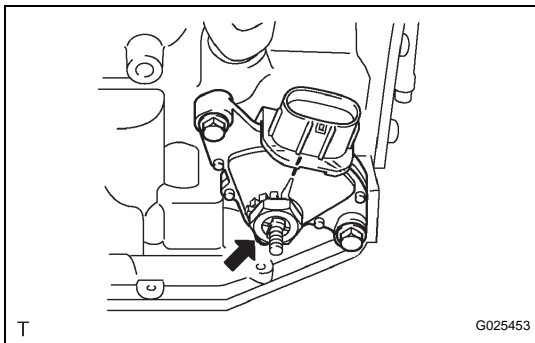

(d) Remove the lock nut and the lock plate.

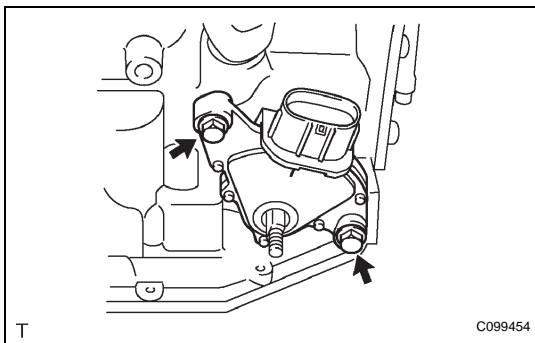

(e) Remove the 2 bolts and pull out the park/neutral position switch.