

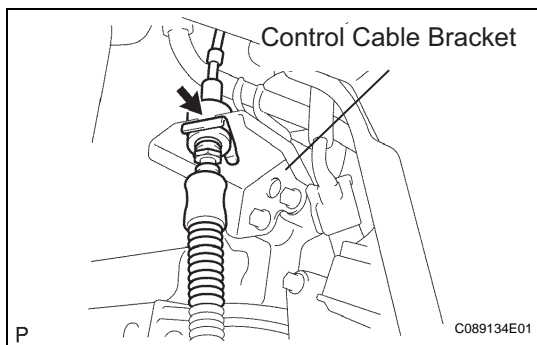


REMOVAL


1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE ENGINE UNDER COVER ASSEMBLY**
 - (a) w/ Engine under cover assembly:
Remove the engine under cover assembly.
3. **REMOVE ENGINE UNDER COVER NO.1**
4. **REMOVE ENGINE UNDER COVER NO.2**
 - (a) w/ Engine under cover No.2:
Remove the engine under cover No.2.
5. **REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSEMBLY W/ PASSENGER AIR BAG ASSEMBLY**
HINT:
(See page [IP-10](#))
6. **REMOVE AIR CONDITIONER UNIT ASSEMBLY**
HINT:
(See page [AC-135](#))
7. **REMOVE CENTER AIR BAG SENSOR ASSEMBLY**
HINT:
(See page [RS-437](#))
8. **REMOVE TRANSMISSION CONTROL CABLE ASSEMBLY**
 - (a) Remove the nut from the control shaft lever.
 - (b) Disconnect the transmission control cable assembly from the control shaft lever.

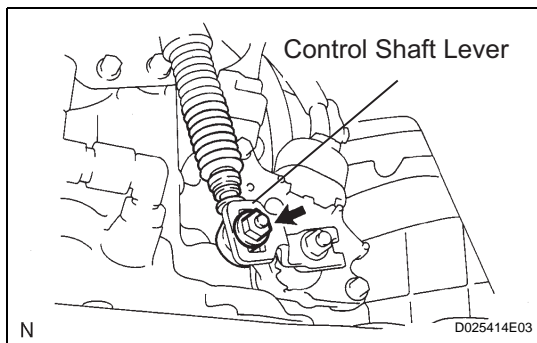


- (c) Remove the clip and disconnect the transmission control cable assembly from the control cable bracket.

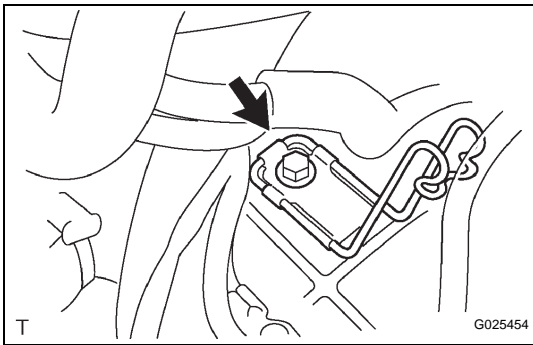

- (d) Remove the bolt and transmission control cable bracket No.2.

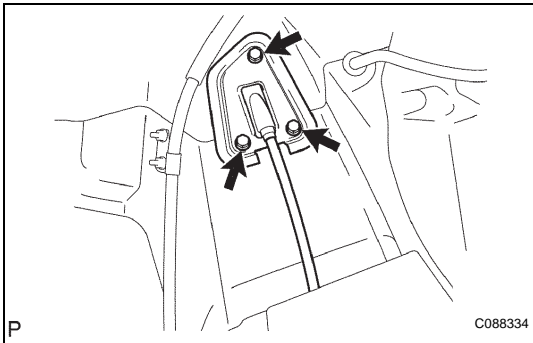

- (e) Remove the 3 bolts and disconnect the transmission control cable assembly from the vehicle.

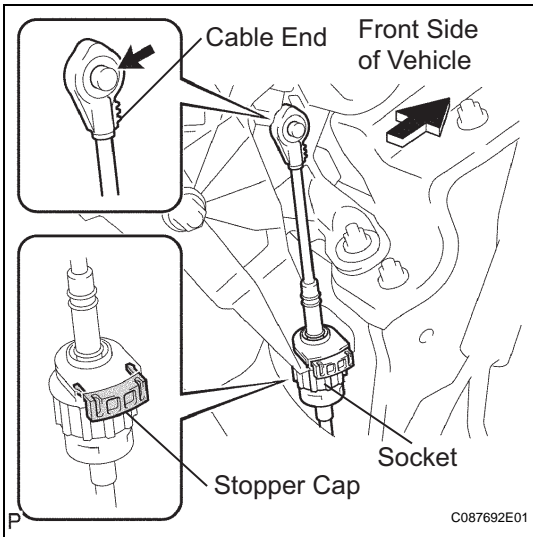

- (f) Using a screwdriver, disconnect the cable end from the shift lever assembly.
- (g) Turn the socket of the transmission control cable assembly counterclockwise and remove the stopper cap.
- (h) Disconnect the transmission control cable assembly from the shift lever assembly.