


DIFFERENTIAL OIL SEAL

COMPONENTS

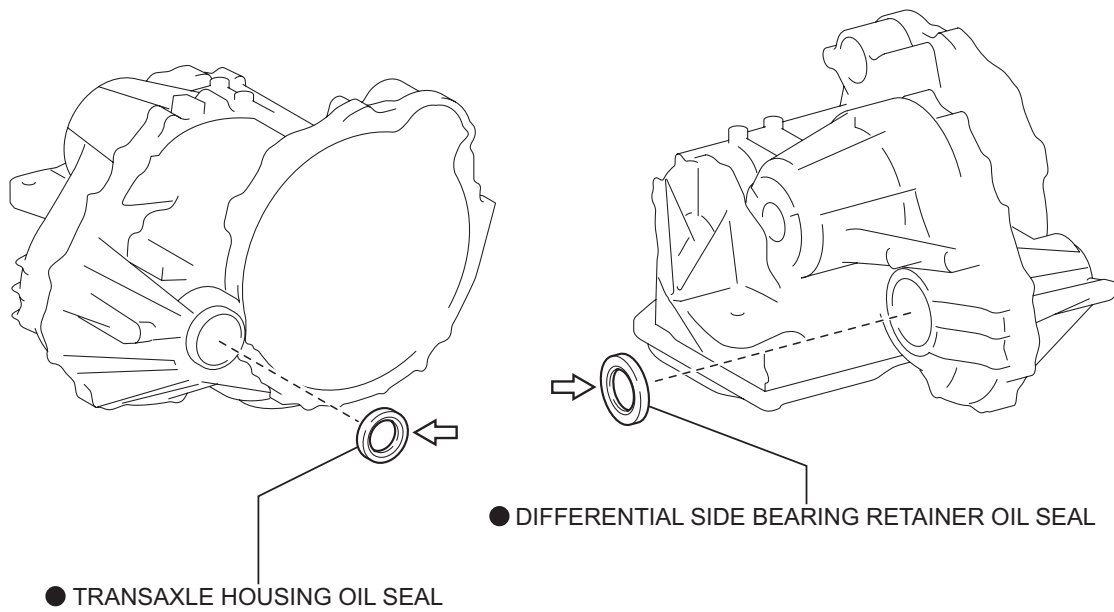

↔ Apply MP grease

● Non-reusable part

REMOVAL

1. REMOVE FRONT WHEELS
2. REMOVE ENGINE UNDER COVER ASSEMBLY
 - (a) w/ Engine under cover assembly:
Remove the engine under cover assembly.
3. REMOVE ENGINE UNDER COVER NO.1
4. REMOVE ENGINE UNDER COVER NO.2
 - (a) w/ Engine under cover No.2:
Remove the engine under cover No.2.
5. DRAIN AUTOMATIC TRANSAXLE FLUID
 - (a) Remove the drain plug, gasket and drain ATF.
 - (b) Install a new gasket and the drain plug.
Torque: 49 N*m (500 kgf*cm, 36 ft.*lbf)
6. REMOVE FRONT DRIVE SHAFT ASSEMBLY LH

HINT:
(See page [DS-6](#))
SST 09520-01010, 09520-24010 (09520-32040)
7. REMOVE FRONT DRIVE SHAFT ASSEMBLY RH (for 2WD)

HINT:
(See page [DS-7](#))
8. REMOVE TRANSAXLE HOUSING OIL SEAL
 - (a) Using SST, pull out the oil seal.
SST 09308-00010
9. REMOVE DIFFERENTIAL SIDE BEARING RETAINER OIL SEAL
 - (a) Using SST, pull out the oil seal.
SST 09308-00010

