


INSTALLATION

1. INSTALL TRANSAXLE HOUSING OIL SEAL

- (a) Using SST and a hammer, install a new oil seal.
SST 09316-60011 (09316-00011)
Oil seal installation depth:
-0.5 to 0.5 mm (-0.020 to 0.020 in.)
- (b) Coat the lip of the oil seal with MP grease.

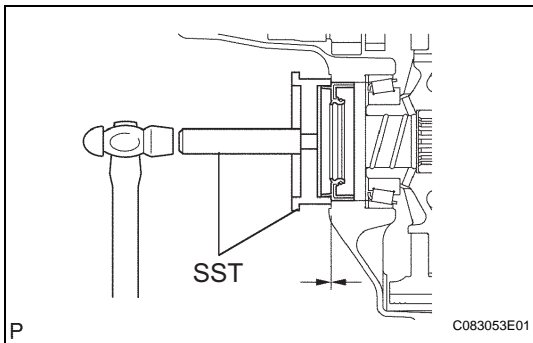

2. INSTALL DIFFERENTIAL SIDE BEARING RETAINER OIL SEAL

- (a) Using SST and a hammer, install a new oil seal.
SST 09223-15020, 09950-70010 (09951-07150)
Oil seal installation depth:
-0.5 to 0.5 mm (-0.020 to 0.020 in.)
- (b) Coat the lip of the oil seal with MP grease.

3. INSTALL FRONT DRIVE SHAFT ASSEMBLY LH

- HINT:
 (See page [DS-15](#))

4. INSTALL FRONT DRIVE SHAFT ASSEMBLY RH (for 2WD)

- HINT:
 (See page [DS-16](#))

5. INSTALL FRONT WHEELS

- Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)

6. ADD AUTOMATIC TRANSAXLE FLUID

7. INSPECT AUTOMATIC TRANSAXLE FLUID (See page [AX-130](#))

8. INSTALL ENGINE UNDER COVER NO.2

- (a) w/ Engine under cover No.2:
 Install the engine under cover No.2.

9. INSTALL ENGINE UNDER COVER NO.1

10. INSTALL ENGINE UNDER COVER ASSEMBLY

- (a) w/ Engine under cover assembly:
 Install the engine under cover assembly.

11. CHECK ABS SPEED SENSOR SIGNAL

- HINT:
 (See page [BC-16](#))

12. PERFORM INITIALIZATION

- HINT:
 Some systems need initialization when disconnecting the cable from the negative battery terminal (See page [AX-1](#)).