

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

2. **REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY**
 - (a) Turn the shift lever knob sub-assembly in the direction indication by the arrow and remove it.

3. **REMOVE CONSOLE PANEL UPPER FRONT**
HINT:
(See page [IP-11](#))

4. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER**
HINT:
(See page [IP-11](#))

5. **REMOVE FRONT DOOR SCUFF PLATE LH**
HINT:
(See page [IP-11](#))

6. **REMOVE FRONT DOOR SCUFF PLATE RH**
HINT:
(See page [IP-13](#))

7. **REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH**
HINT:
(See page [IP-13](#))

8. **REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH**
HINT:
(See page [IP-12](#))


9. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER**
HINT:
(See page [IP-12](#))


10. **REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY**
HINT:
(See page [IP-13](#))

11. **REMOVE FLOOR CARPET COVER CENTER LH**
HINT:
(See page [IP-14](#))

12. **REMOVE FLOOR CARPET COVER CENTER RH**
HINT:
(See page [IP-14](#))


13. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER**
HINT:
(See page [IP-14](#))

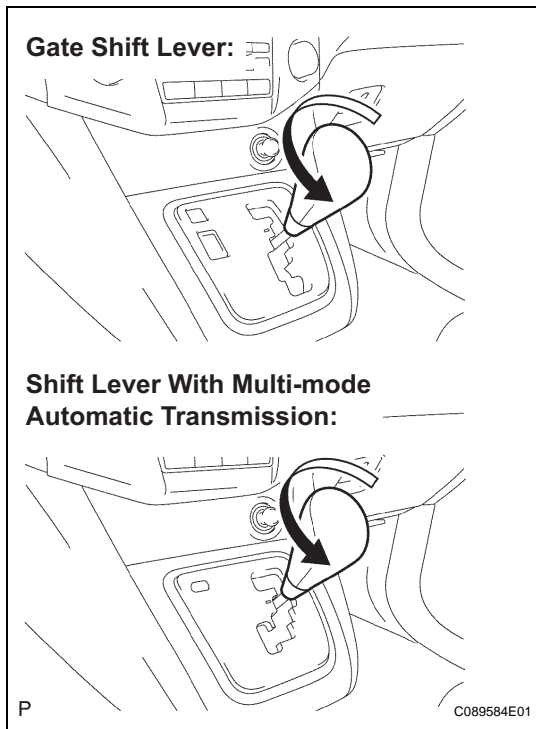

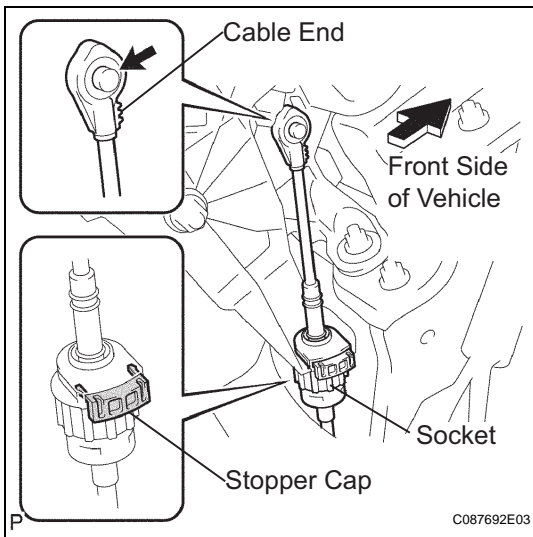


14. DISCONNECT TRANSMISSION CONTROL CABLE ASSEMBLY

- (a) Using a screwdriver, disconnect the cable end from the shift lever assembly.
- (b) Turn the socket of the transmission control cable assembly counterclockwise and remove the stopper cap.
- (c) Disconnect the transmission control cable assembly from the shift lever assembly.

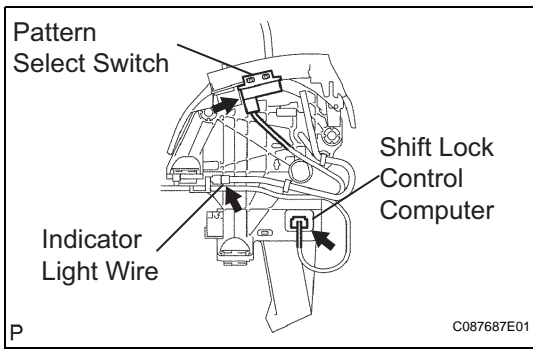

15. REMOVE SHIFT LEVER ASSEMBLY


- (a) Disconnect the pattern select switch connector, the shift rock control computer connector and the indicator light wire connector.

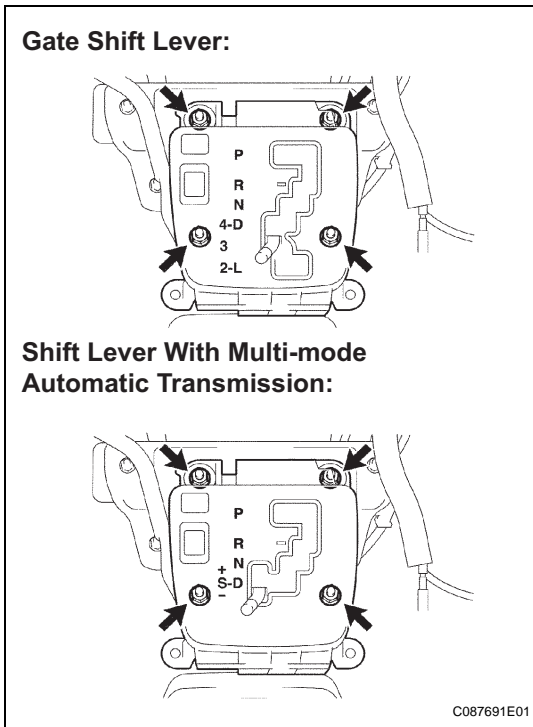


- (b) Remove the 4 nuts and disconnect the shift lever assembly from the vehicle.

DISASSEMBLY

Gate Shift Lever:

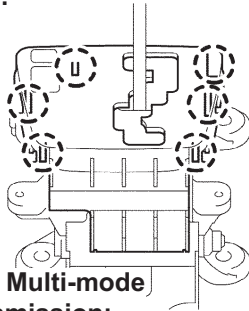

Shift Lever With Multi-mode Automatic Transmission:

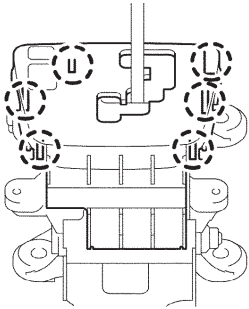


C087693E01

1. REMOVE POSITION INDICATOR HOUSING

- (a) Using a screwdriver, remove the position indicator housing from the shift lever assembly.

2. REMOVE SHIFT LEVER CAP


- (a) Using a screwdriver, remove the shift lever cap from the position indicator housing.

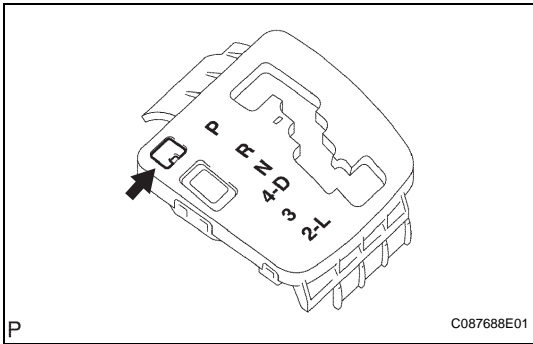

C087688E01

3. REMOVE PATTERN SELECT SWITCH ASSEMBLY NO.1


- (a) Remove the pattern select switch assembly No.1 from the position indicator housing.

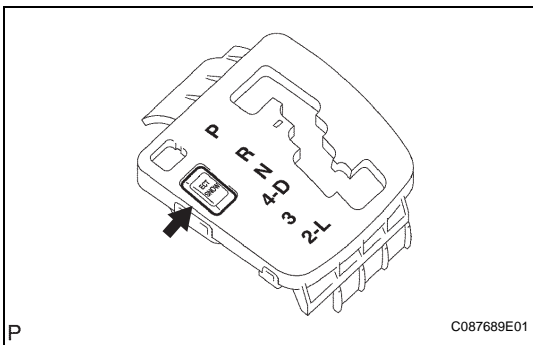


C087689E01

4. REMOVE SHIFT LOCK RELEASE LINK NO.1

- (a) Remove the shift lock release link, spring and cover from the position indicator housing.

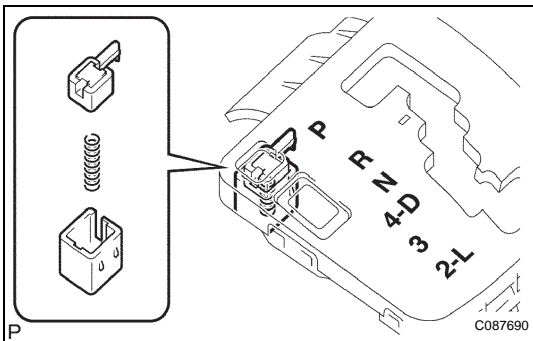


C087690

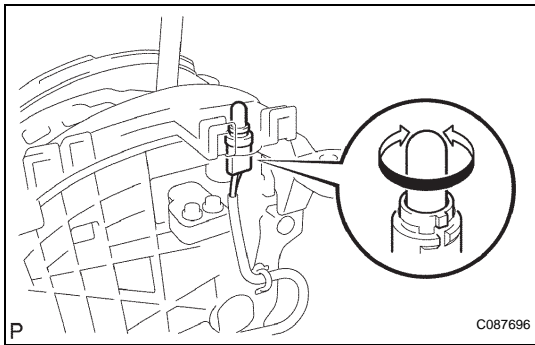


5. REMOVE POSITION INDICATOR LIGHT GUIDE

- (a) Remove the indicator light wire sub-assembly from the shift lever assembly.

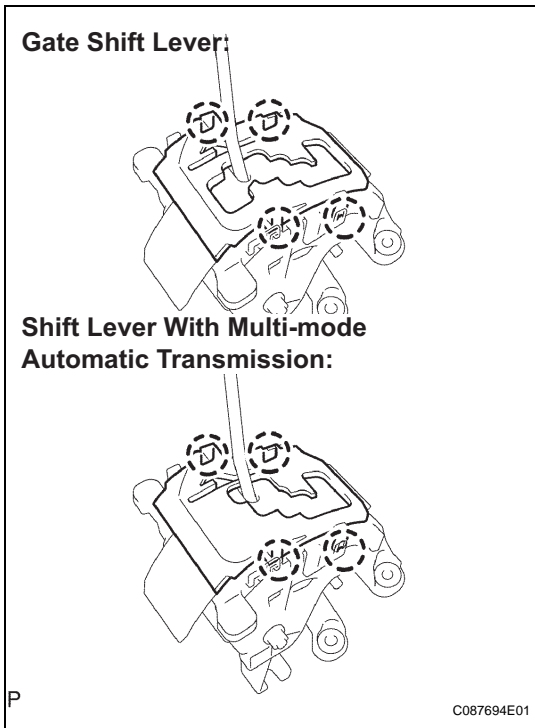


- (b) Using a screwdriver, remove the position indicator light guide from the shift lever assembly.

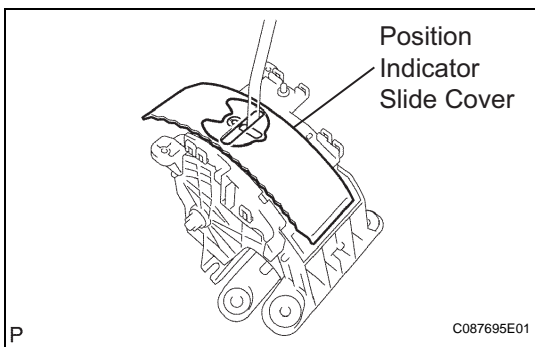


6. REMOVE POSITION INDICATOR SLIDE COVER

- (a) Remove the position indicator slide cover from the position indicator housing lower.

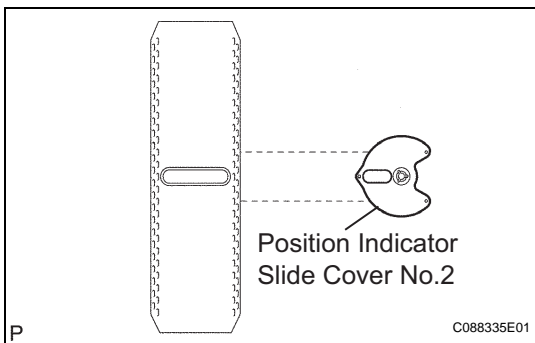


7. REMOVE POSITION INDICATOR SLIDE COVER

- (a) Remove the position indicator slide cover No.2 from the position indicator slide cover.

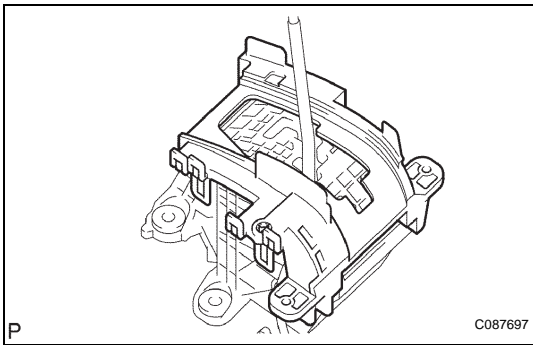


8. REMOVE POSITION INDICATOR HOUSING LOWER

- (a) Remove the position indicator housing lower from the shift lock control unit.

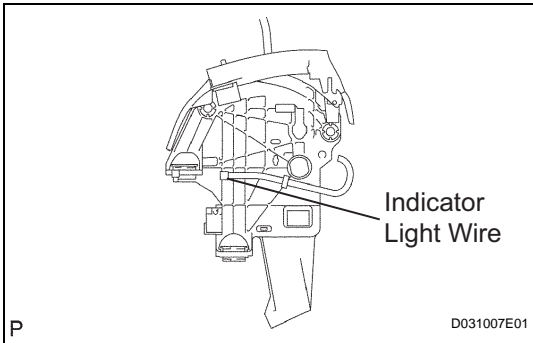

9. REMOVE INDICATOR LIGHT WIRE SUB-ASSEMBLY

- (a) Gate shift lever:
 - (1) Remove the connector from the shift lever assembly.

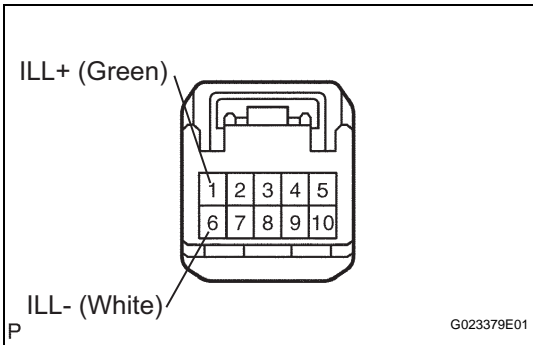

- (b) Shift lever with multi-mode automatic transmission:
 - (1) Remove the connector from the shift lever assembly.
 - (2) Using a screwdriver, release the stopper of the connector.
 - (3) Using a screwdriver, disengage the locking lug of terminals (1) and (6), and pull the terminals out from the rear.