
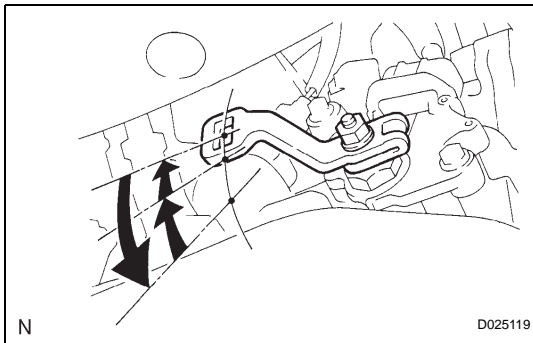


ADJUSTMENT

1. INSPECT SHIFT LEVER POSITION


- (a) When shifting from the P to R position only with the ignition switch on and brake pedal depressed, make sure that the shift lever moves smoothly and can be moderately operated.
- (b) Start the engine and make sure that the vehicle moves forward when shifting from the N to D position and moves rearward when shifting to the R position.

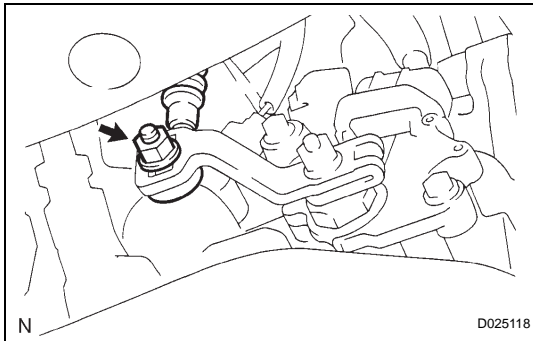

2. ADJUST SHIFT LEVER POSITION

- (a) Loosen the nut on the control shaft lever.

- (b) Push the control shaft fully downward.
- (c) Return the control shaft lever 2 notches to the N position.

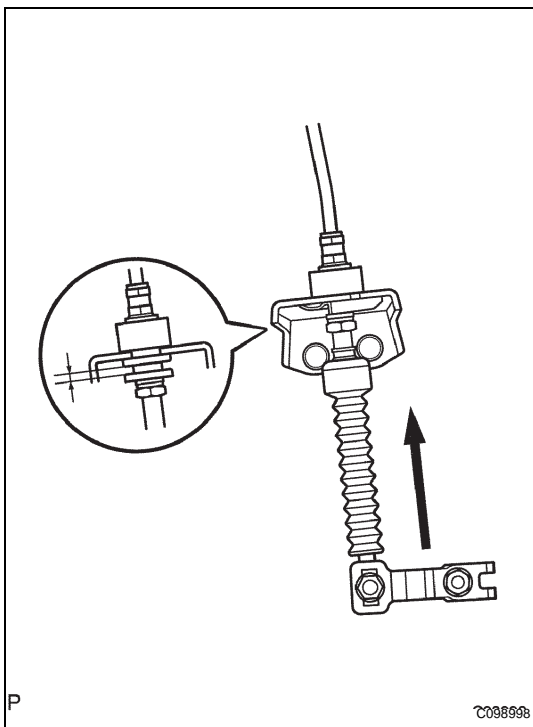


- (d) While pushing the control cable end up with the shift lever in the N position, install it to the control shaft lever with the nut.

Torque: 15 N*m (150 kgf*cm, 10 ft.*lbf)


NOTICE:

- If the control cable end is excessively pushed up, the shift lever can not be adjusted.
 - When tightening the nut, confirm that the control cable is properly stretched.
- (e) Start the engine and make sure that the vehicle moves forward when shifting the lever from the N to D position and moves rearward when shifting it to the R position.


REASSEMBLY

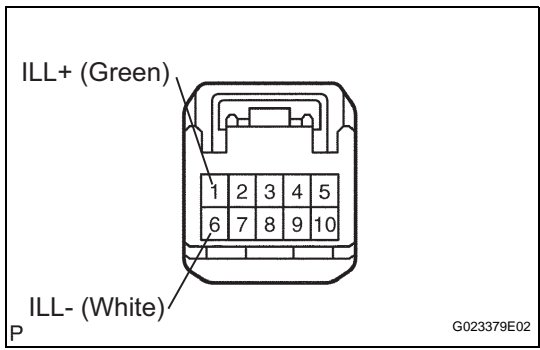

1. **INSTALL INDICATOR LIGHT WIRE SUB-ASSEMBLY**
 - (a) Shift lever with multi-mode automatic transmission:
 - (1) Connect the 2 terminals of indicator light wire harness to the connector of transmission control switch.
 - (2) Install the connector to the shift lever assembly.

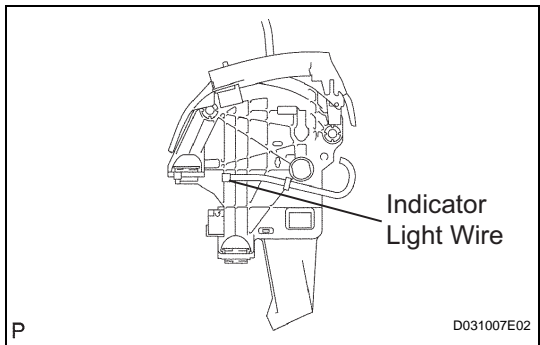


- (b) Gate shift lever:
 - (1) Install the connector to the shift lever assembly.

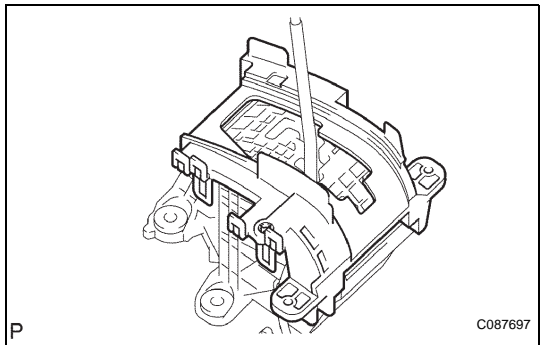


2. **INSTALL POSITION INDICATOR HOUSING LOWER**
 - (a) Install the position indicator housing lower to the shift lock control unit.

HINT:
Engage the claws securely.

AX

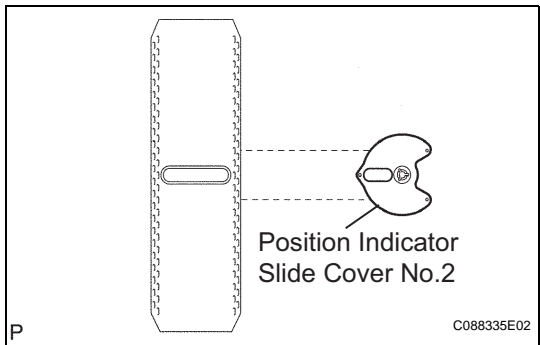


3. **INSTALL POSITION INDICATOR SLIDE COVER**
 - (a) Install the position indicator slide cover No.2 to the position indicator slide cover.

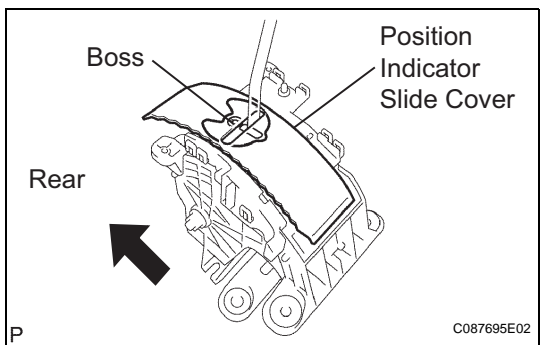

4. **INSTALL POSITION INDICATOR SLIDE COVER**
 - (a) Install the position indicator slide cover to the position indicator housing lower.

NOTICE:
Install the position indicator slide cover No.2 with the boss facing the rear of the vehicle.

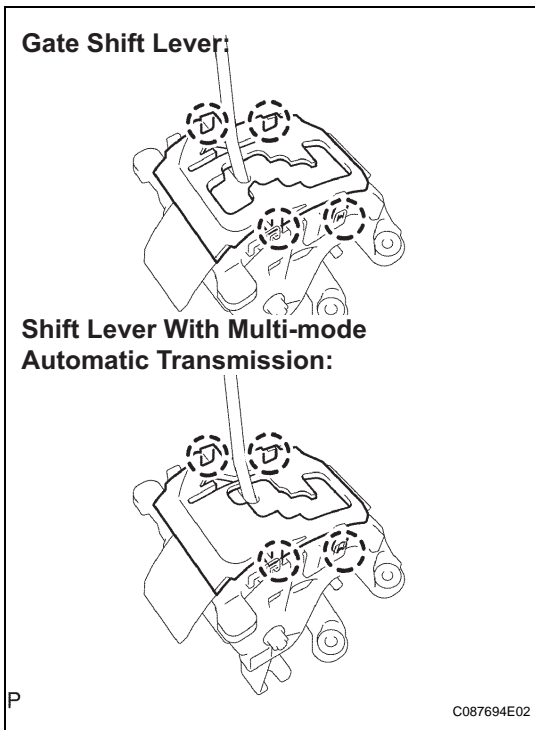


5. INSTALL POSITION INDICATOR LIGHT GUIDE


- (a) Install the position indicator light guide to the position indicator housing lower.

HINT:

Engage the claws securely.

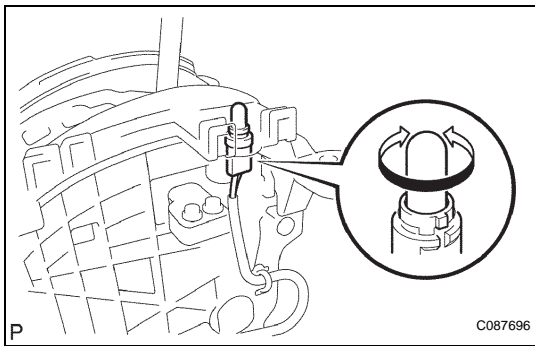


- (b) Install the indicator light wire sub-assembly to the shift lever assembly.

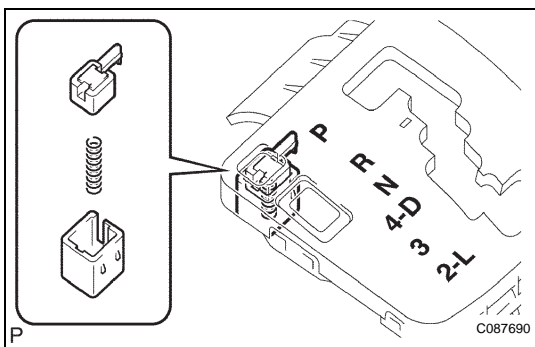


6. INSTALL SHIFT LOCK RELEASE LINK NO.1

- (a) Apply MP grease to the shift lock release link and spring.
- (b) Install the shift lock release link, spring and cover.

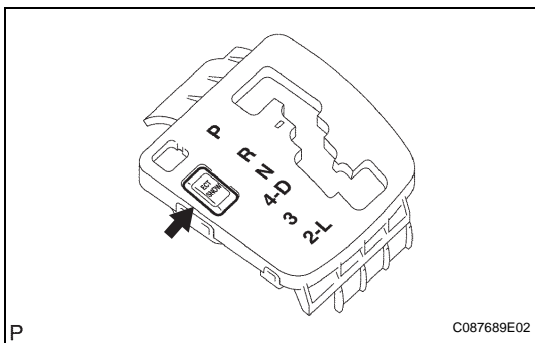


7. INSTALL PATTERN SELECT SWITCH ASSEMBLY NO.1

- (a) Install the pattern select switch assembly No.1 to the position indicator housing.

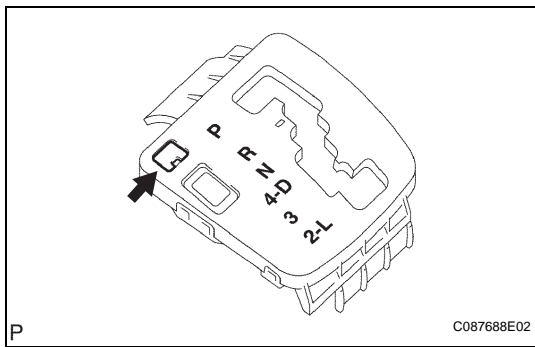

8. INSTALL SHIFT LEVER CAP

- (a) Install the shift lever cap to the position indicator housing.

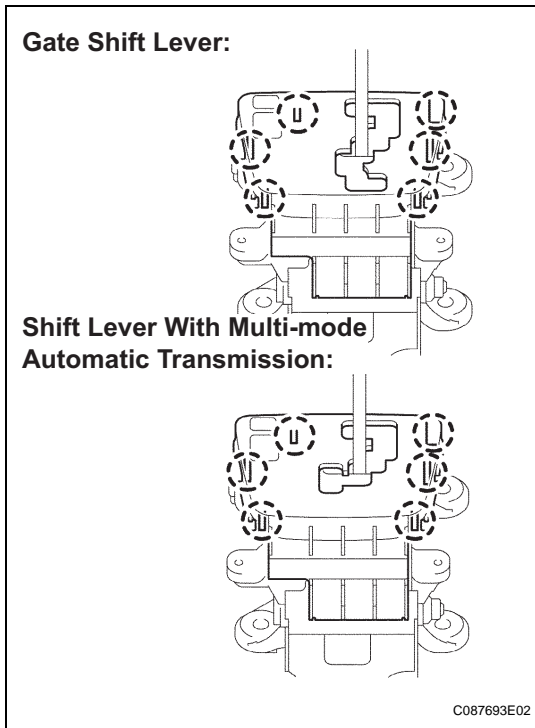


9. INSTALL POSITION INDICATOR HOUSING

- (a) Install the position indicator housing to the shift lever assembly.

HINT:

Engage the claws securely.

AX

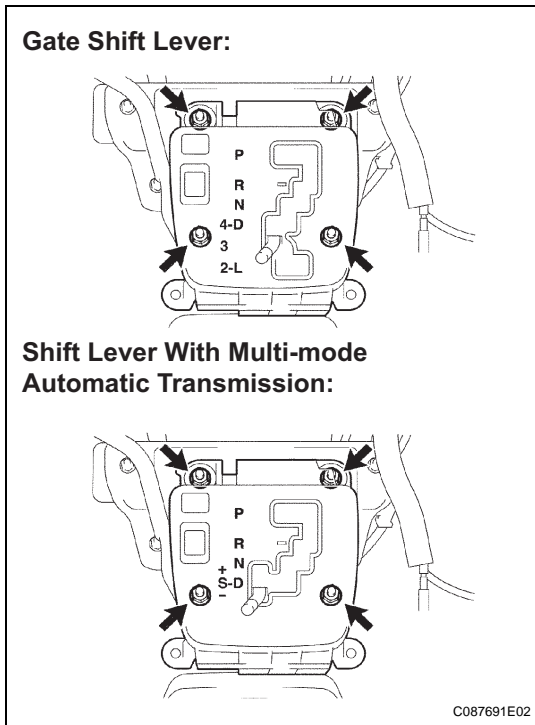

INSTALLATION

1. INSTALL SHIFT LEVER ASSEMBLY

- (a) Install the shift lever assembly with the 4 nuts.


Torque: 12 N*m (122 kgf*cm, 9 ft.*lbf)

HINT:


Tighten them in the order, A, B, C and D.

NOTICE:

Be careful not to put the wirings of the indicator light or the shift lock system between the floor shift assembly and the floor while installing the floor shift assembly.

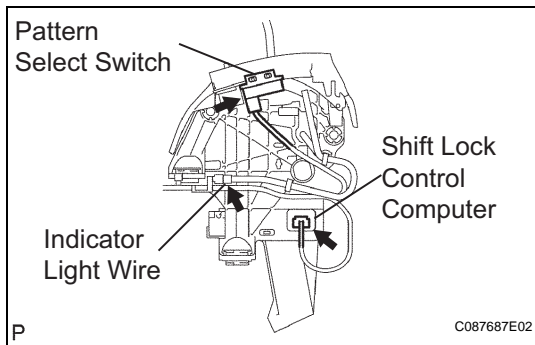

- (b) Install the pattern select switch connector, the shift lock control computer connector and the indicator light wire connector.

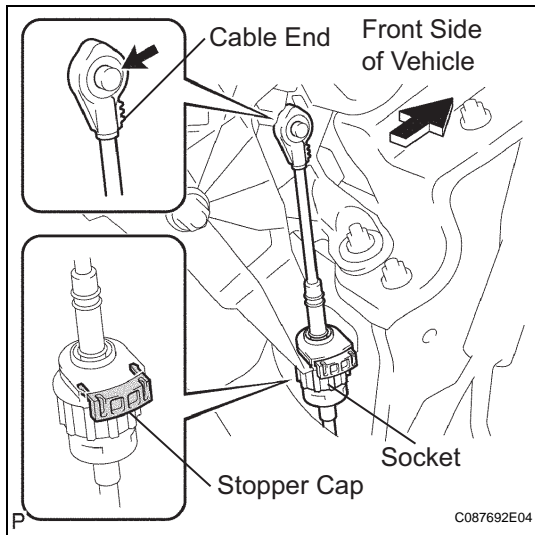

2. CONNECT TRANSMISSION CONTROL CABLE ASSEMBLY

- Connect the socket of the transmission control cable assembly to the shift lever assembly.
- Connect the control cable end to the shift lever assembly.
- Push the stopper cap to the socket as shown in the illustration.
- Turn the socket of the transmission control cable assembly clockwise and install the stopper cap.

NOTICE:

- To prevent torsion of the inner cable, the end with the eye should face up.
- Push the cable end to the bottom of the pin.
- Confirm that the connection between the socket and the shift rock control unit is fixed.

3. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

- Install the shift lever knob sub-assembly.

4. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER CENTER

HINT:

(See page [IP-27](#))

5. INSTALL FLOOR CARPET COVER CENTER RH

HINT:

(See page [IP-27](#))

6. INSTALL FLOOR CARPET COVER CENTER LH

HINT:

(See page [IP-27](#))

7. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY

HINT:

(See page [IP-27](#))

8. INSTALL INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER

HINT:

(See page [IP-29](#))

9. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH

HINT:

(See page [IP-29](#))

10. **INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH**
HINT:
(See page [IP-28](#))
11. **INSTALL FRONT DOOR SCUFF PLATE RH**
HINT:
(See page [IP-28](#))
12. **INSTALL FRONT DOOR SCUFF PLATE LH**
HINT:
(See page [IP-29](#))
13. **INSTALL INSTRUMENT PANEL FINISH PANEL LOWER**
HINT:
(See page [IP-30](#))
14. **INSTALL CONSOLE PANEL UPPER FRONT**
HINT:
(See page [IP-30](#))
15. **CONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
16. **INSPECT SHIFT LEVER POSITION (See page [AX-182](#))**
17. **ADJUST SHIFT LEVER POSITION (See page [AX-182](#))**
18. **PERFORM INITIALIZATION**
HINT:
(See page [AX-1](#))