

## REPLACEMENT

**HINT:**

Replace the RH side using the same procedures as for the LH side.


1. **REMOVE REAR WHEEL**
2. **SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH**
  - (a) Separate rear disc brake caliper assembly LH for 2WD (see page [AH-15](#)).
3. **SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY LH**
  - (a) Separate rear disc brake caliper assembly LH for 4WD (see page [AH-19](#)).

4. **REMOVE REAR DISC**

5. **REMOVE REAR AXLE LH HUB BOLT**


- (a) Temporarily install the 2 nuts and washers to the rear axle LH hub bolt as shown in the illustration.
- (b) Using SST(s) and a hammer handle or an equivalent to hold the hub & bearing assembly, remove the rear axle LH hub bolt.

**SST 09628-10011**

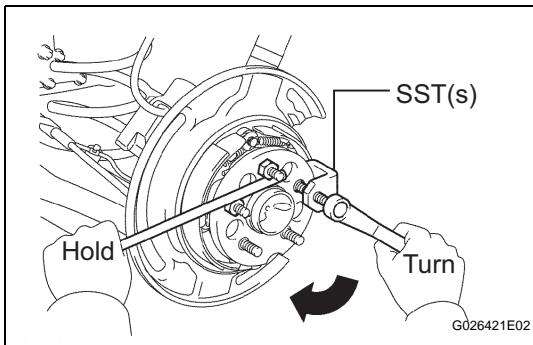

6. **INSTALL REAR AXLE LH HUB BOLT**

- (a) Install a washer and nut to a new bolt, as shown in the illustration.
- (b) Using a hammer handle or an equivalent to hold the hub & bearing assembly, install the rear axle LH hub bolt by tightening the nut.

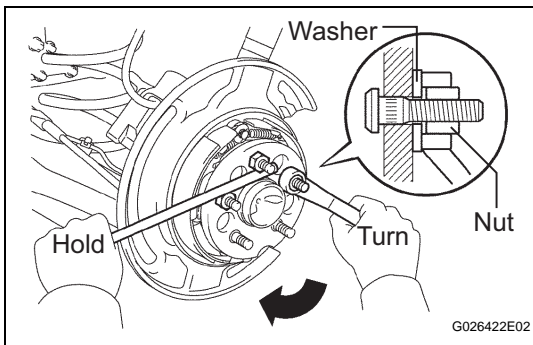

7. **INSTALL REAR DISC**

8. **INSTALL REAR DISC BRAKE CALIPER ASSEMBLY LH**

- (a) Install rear disc brake caliper assembly LH for 2WD (see page [AH-16](#)).

9. **INSTALL REAR DISC BRAKE CALIPER ASSEMBLY LH**

- (a) Install rear disc brake caliper assembly LH for 4WD (see page [AH-19](#)).

10. **INSTALL REAR WHEEL**

**Torque: 103 N\*m (1,050 kgf\*cm, 76 ft.\*lbf)**