

## REMOVAL

### 1. DRAIN BRAKE FLUID



#### NOTICE:

Wash brake fluid off immediately if it adheres to any painted surface.


### 2. DISCONNECT BATTERY NEGATIVE TERMINAL

### 3. REMOVE BRAKE ACTUATOR WITH BRACKET

(a) Using SST, disconnect the 6 brake tubes from the actuator with bracket.

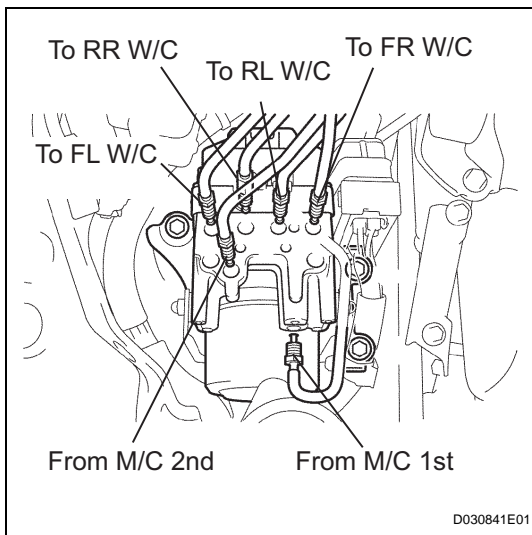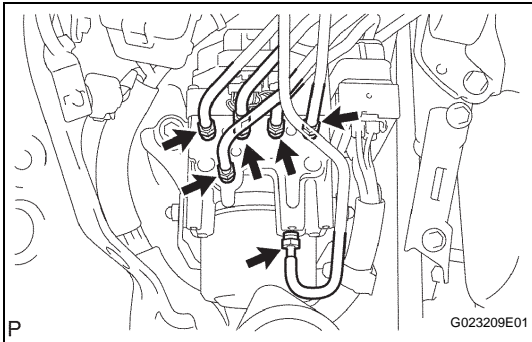


(b) Use tags or make a memo to identify the reconnection points.

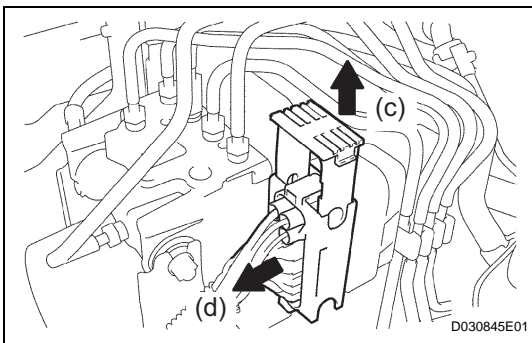

(c) Pull the lock lever upward.

(d) Disconnect the actuator connector.

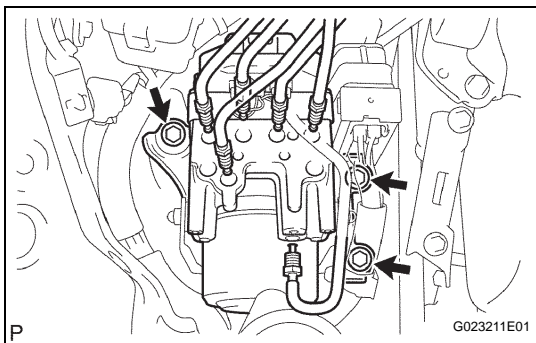

- (e) Remove the 2 bolts, the nut and the actuator with bracket.

**NOTICE:**

**Be careful not to damage the brake tubes and wire harness.**

**4. REMOVE BRAKE ACTUATOR**

- (a) Remove the 2 nuts and the brake actuator assembly from the brake actuator bracket.