

## INSTALLATION

### 1. INSTALL BRAKE ACTUATOR

- (a) Install the brake actuator assembly with the 2 nuts.  
**Torque: 5.4 N\*m (55 kgf\*cm, 48 in.\*lbf)**

### 2. INSTALL BRAKE ACTUATOR WITH BRACKET



- (a) Install the actuator with bracket with the 3 bolts.

**Torque: 19 N\*m (194 kgf\*cm, 14 ft.\*lbf)**

**NOTICE:**

**Be careful not to damage the brake tubes and wire harness.**

- (b) Connect the actuator connector.

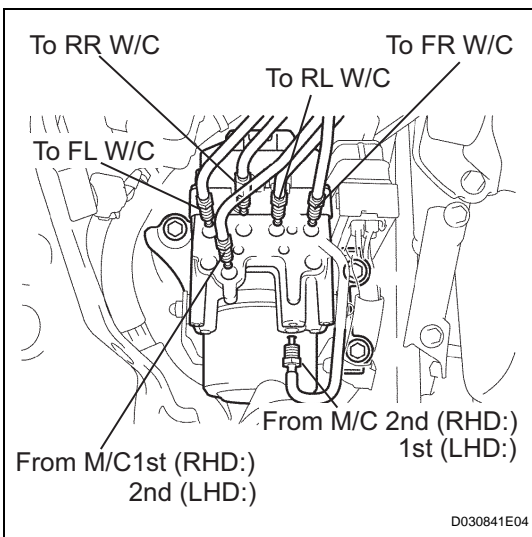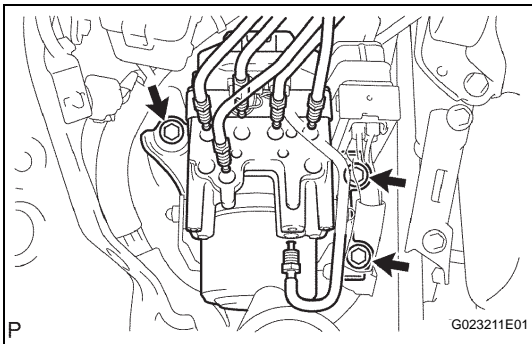

- (c) Using SST, connect each brake tube to correct positions of the actuator with bracket, as shown in the illustration.

**Torque: 15 N\*m (155 kgf\*cm, 11 ft.\*lbf)**

### 3. FILL RESERVOIR WITH BRAKE FLUID

HINT:

See page [BR-3](#).

### 4. BLEED BRAKE MASTER CYLINDER SUB-ASSEMBLY

**SST 09023-00101**

HINT:

See page [BR-3](#).

### 5. BLEED BRAKE LINE

HINT:

See page [BR-3](#).

### 6. CHECK BRAKE FLUID LEAKAGE

### 7. CHECK FLUID LEVEL IN RESERVOIR

HINT:

See page [BR-3](#).

### 8. CONNECT BATTERY NEGATIVE TERMINAL

### 9. PERFORM INITIALIZATION

HINT:

See page [BC-1](#).

### 10. PERFORM YAW RATE SENSOR ZERO POINT CALIBRATION

HINT:

See page [BC-5](#).

### 11. CHECK BRAKE ACTUATOR WITH INTELLIGENT TESTER

HINT:

See page [BC-108](#).