


# FRONT SPEED SENSOR

## COMPONENTS

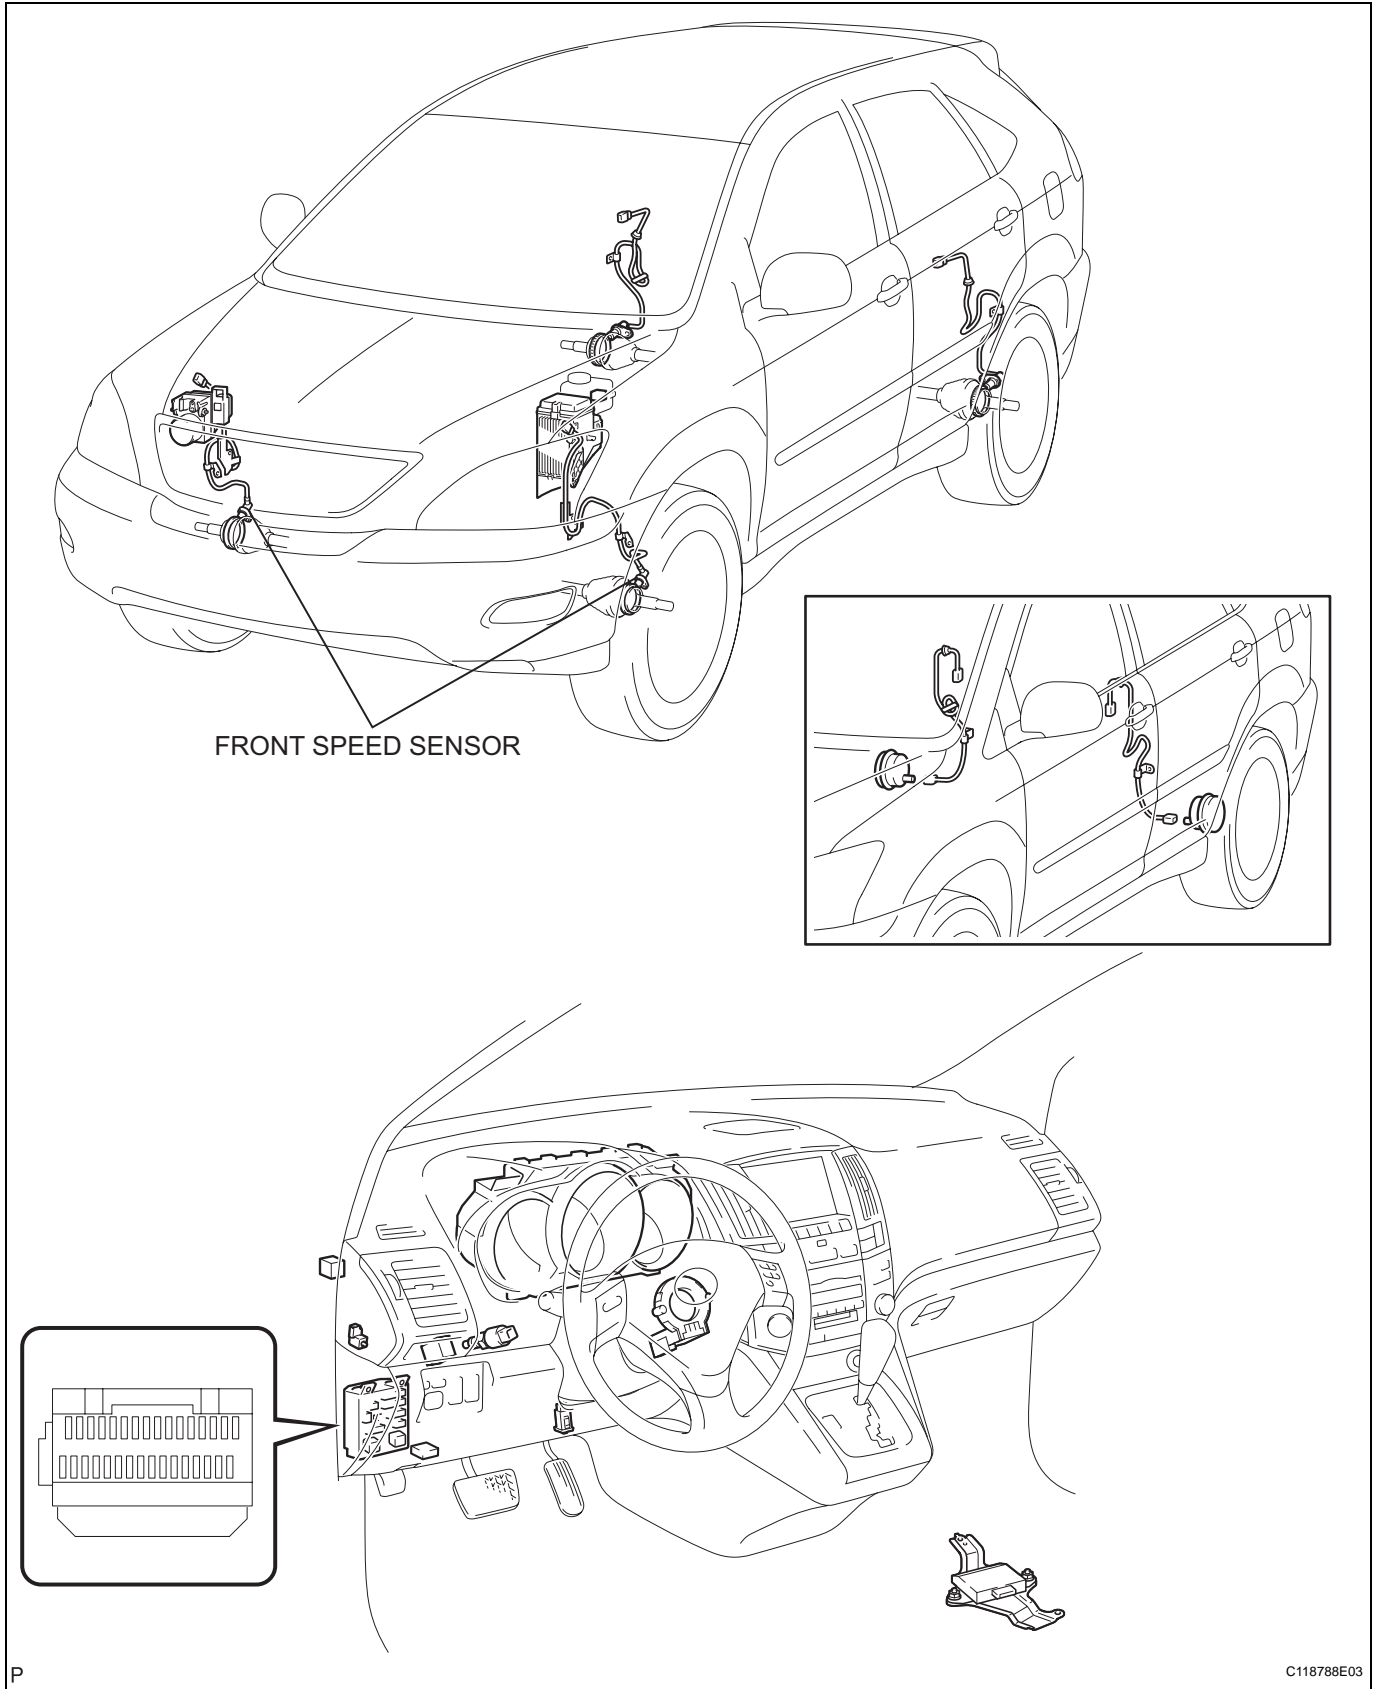



FRONT SPEED SENSOR

## REMOVAL

### HINT:

Replace the RH side by using the same procedures as those as those for the LH side.

1. REMOVE FRONT WHEEL
2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH
3. REMOVE SPEED SENSOR FRONT LH
  - (a) Disconnect the speed sensor connector.
  - (b) Remove the 2 bolts and the clamp from the body and the shock absorber assembly.

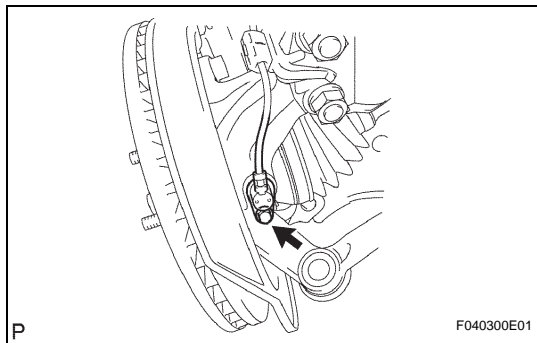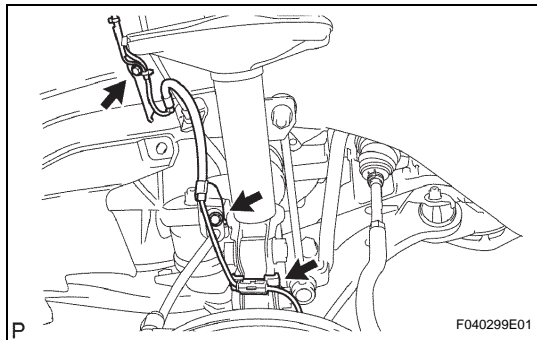

- (c) Remove the bolt and the speed sensor front.

### NOTICE:

Prevent foreign matter from attaching to the sensor tip.