


# YAW RATE AND ACCELERATION SENSOR

## COMPONENTS

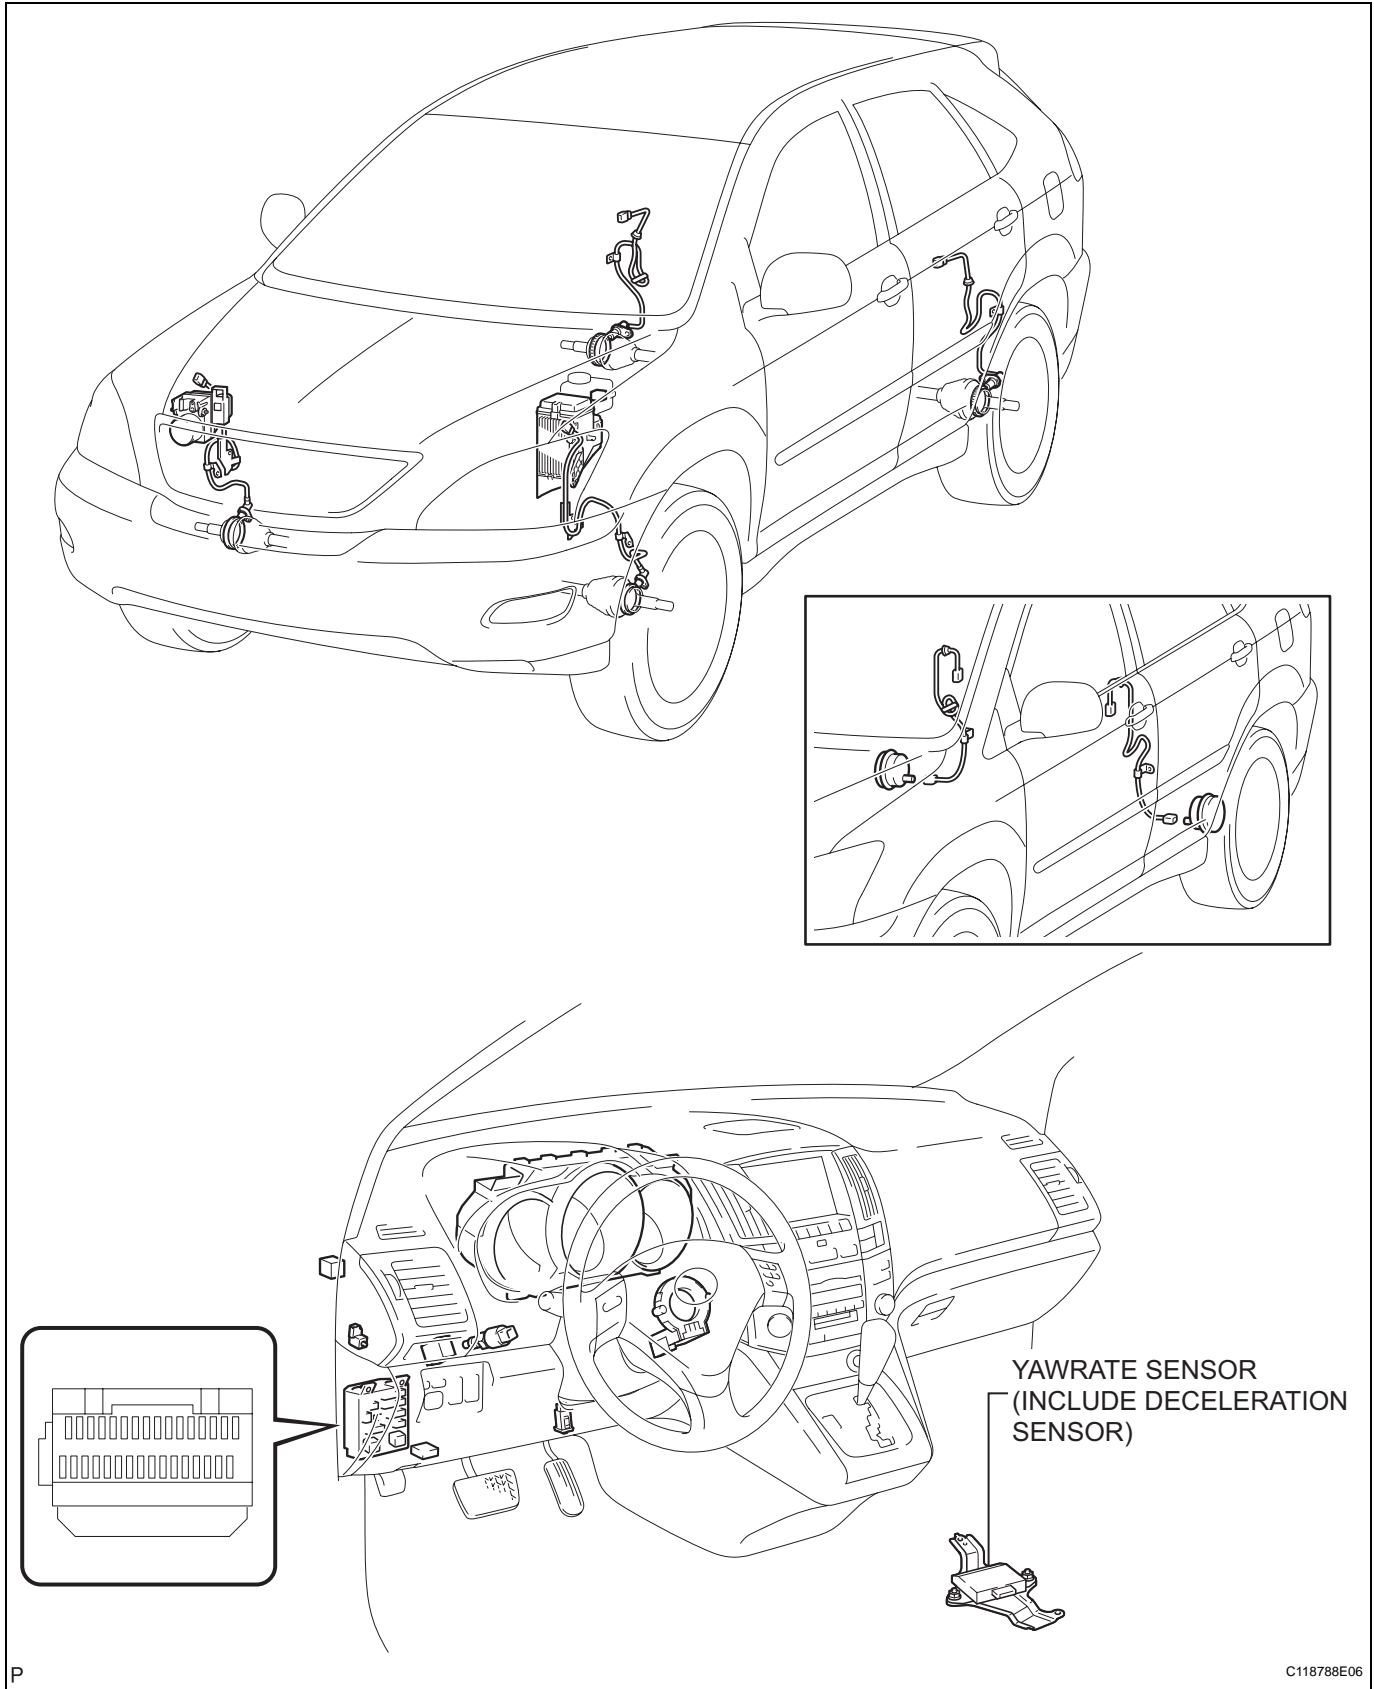

## REMOVAL

### NOTICE:

- Don't use the dropped or damaged yawrate sensor.
- Free from the foreign matters between yawrate sensor bracket and body.
- Make sure the sensor direction.

#### 1. REMOVE FRONT SEAT ASSEMBLY RH

HINT:

See page [SE-38](#)

#### 2. REMOVE FRONT DOOR SCUFF PLATE RH (See page [IR-6](#))

#### 3. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

See page [SE-62](#)

#### 4. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

#### 5. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH



#### 6. REMOVE CENTER PILLAR GARNISH LOWER RH (See page [IR-7](#))

#### 7. REMOVE YAWRATE SENSOR PROTECTOR

- (a) Remove the bolt and the sensor protector.

#### 8. REMOVE YAWRATE SENSOR

- (a) Disconnect the connector.

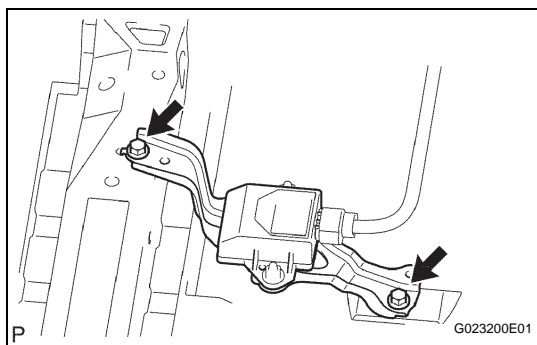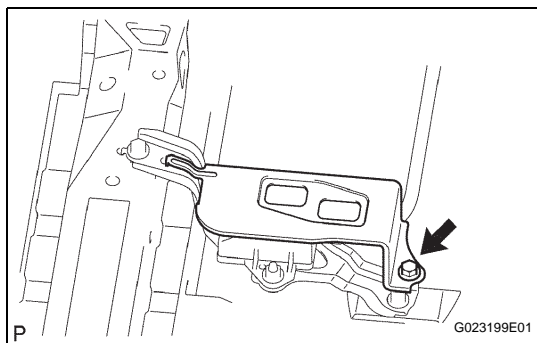

- (b) Remove the 2 bolts and the yawrate sensor.

### NOTICE:

Do not remove the yawrate sensor from the yawrate sensor bracket.