
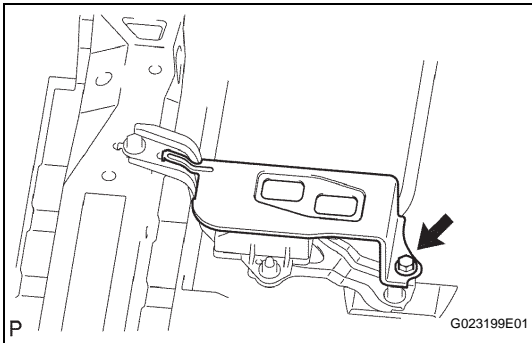


## INSTALLATION

### 1. INSTALL YAWRATE SENSOR

- (a) Install the yawrate sensor with the 2 bolts.  
**Torque: 14 N\*m (143 kgf\*cm, 10 ft.\*lbf)**
- (b) Connect the connector.

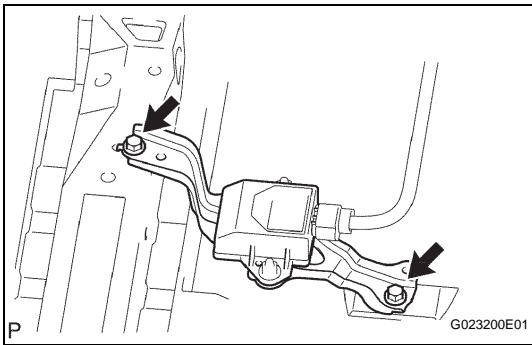

### 2. INSTALL YAWRATE SENSOR PROTECTOR

- (a) Install the sensor protector with the bolt.

### 3. INSTALL CENTER PILLAR GARNISH LOWER RH

### 4. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH

### 5. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

### 6. INSTALL REAR DOOR SCUFF PLATE RH

### 7. INSTALL FRONT DOOR SCUFF PLATE RH

### 8. INSTALL FRONT SEAT ASSEMBLY RH

HINT:

See page [SE-45](#)

### 9. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION

HINT:

See page [BC-5](#)