


BRAKE MASTER CYLINDER

COMPONENTS

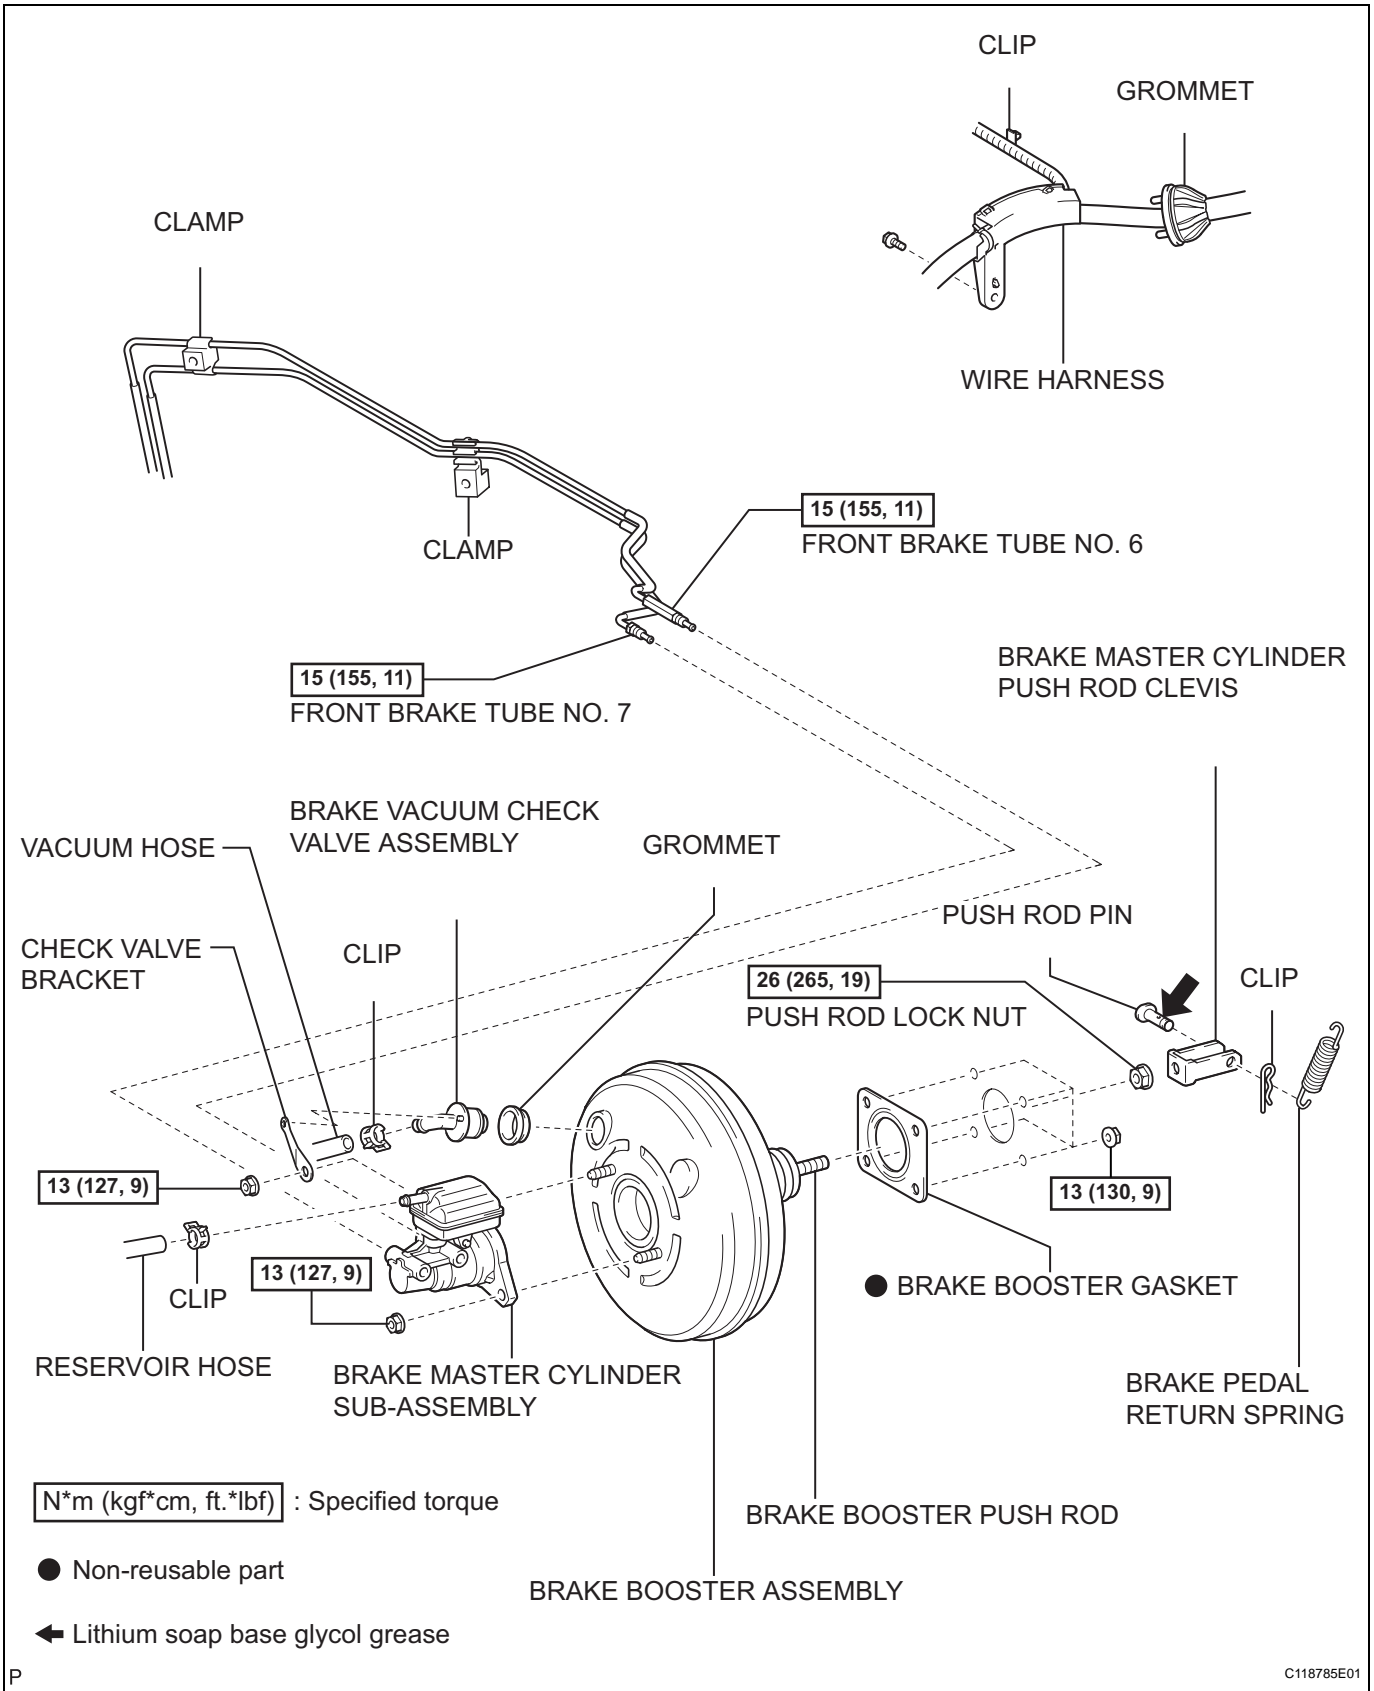

REMOVAL

1. DRAIN BRAKE FLUID

NOTICE:

Wash the brake fluid off immediately if it adheres to any painted surfaces.


2. REMOVE V-BANK COVER SUB-ASSEMBLY (See page [EM-113](#))

3. REMOVE AIR CLEANER ASSEMBLY


4. REMOVE AIR CLEANER HOSE NO.1

5. REMOVE BRAKE MASTER CYLINDER SUB-ASSEMBLY

(a) Slide the clip and disconnect the reservoir tube.

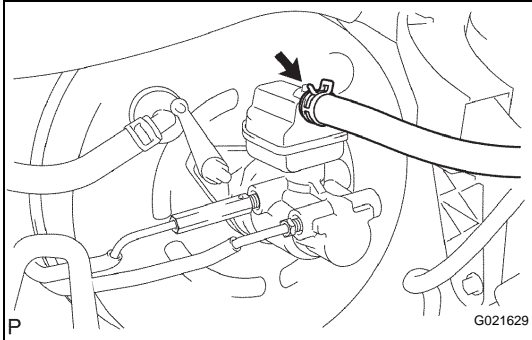

(b) Using SST(s), disconnect the 2 brake tubes from the brake master w/ plate cylinder sub-assembly.
SST 09023-00101

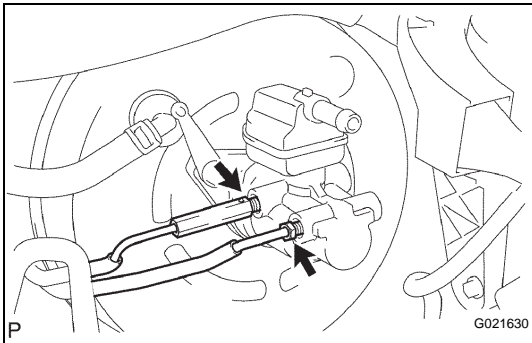

(c) Remove the 2 nuts, then check valve bracket and the brake master w/ plate cylinder assembly.

