


FRONT BRAKE COMPONENTS

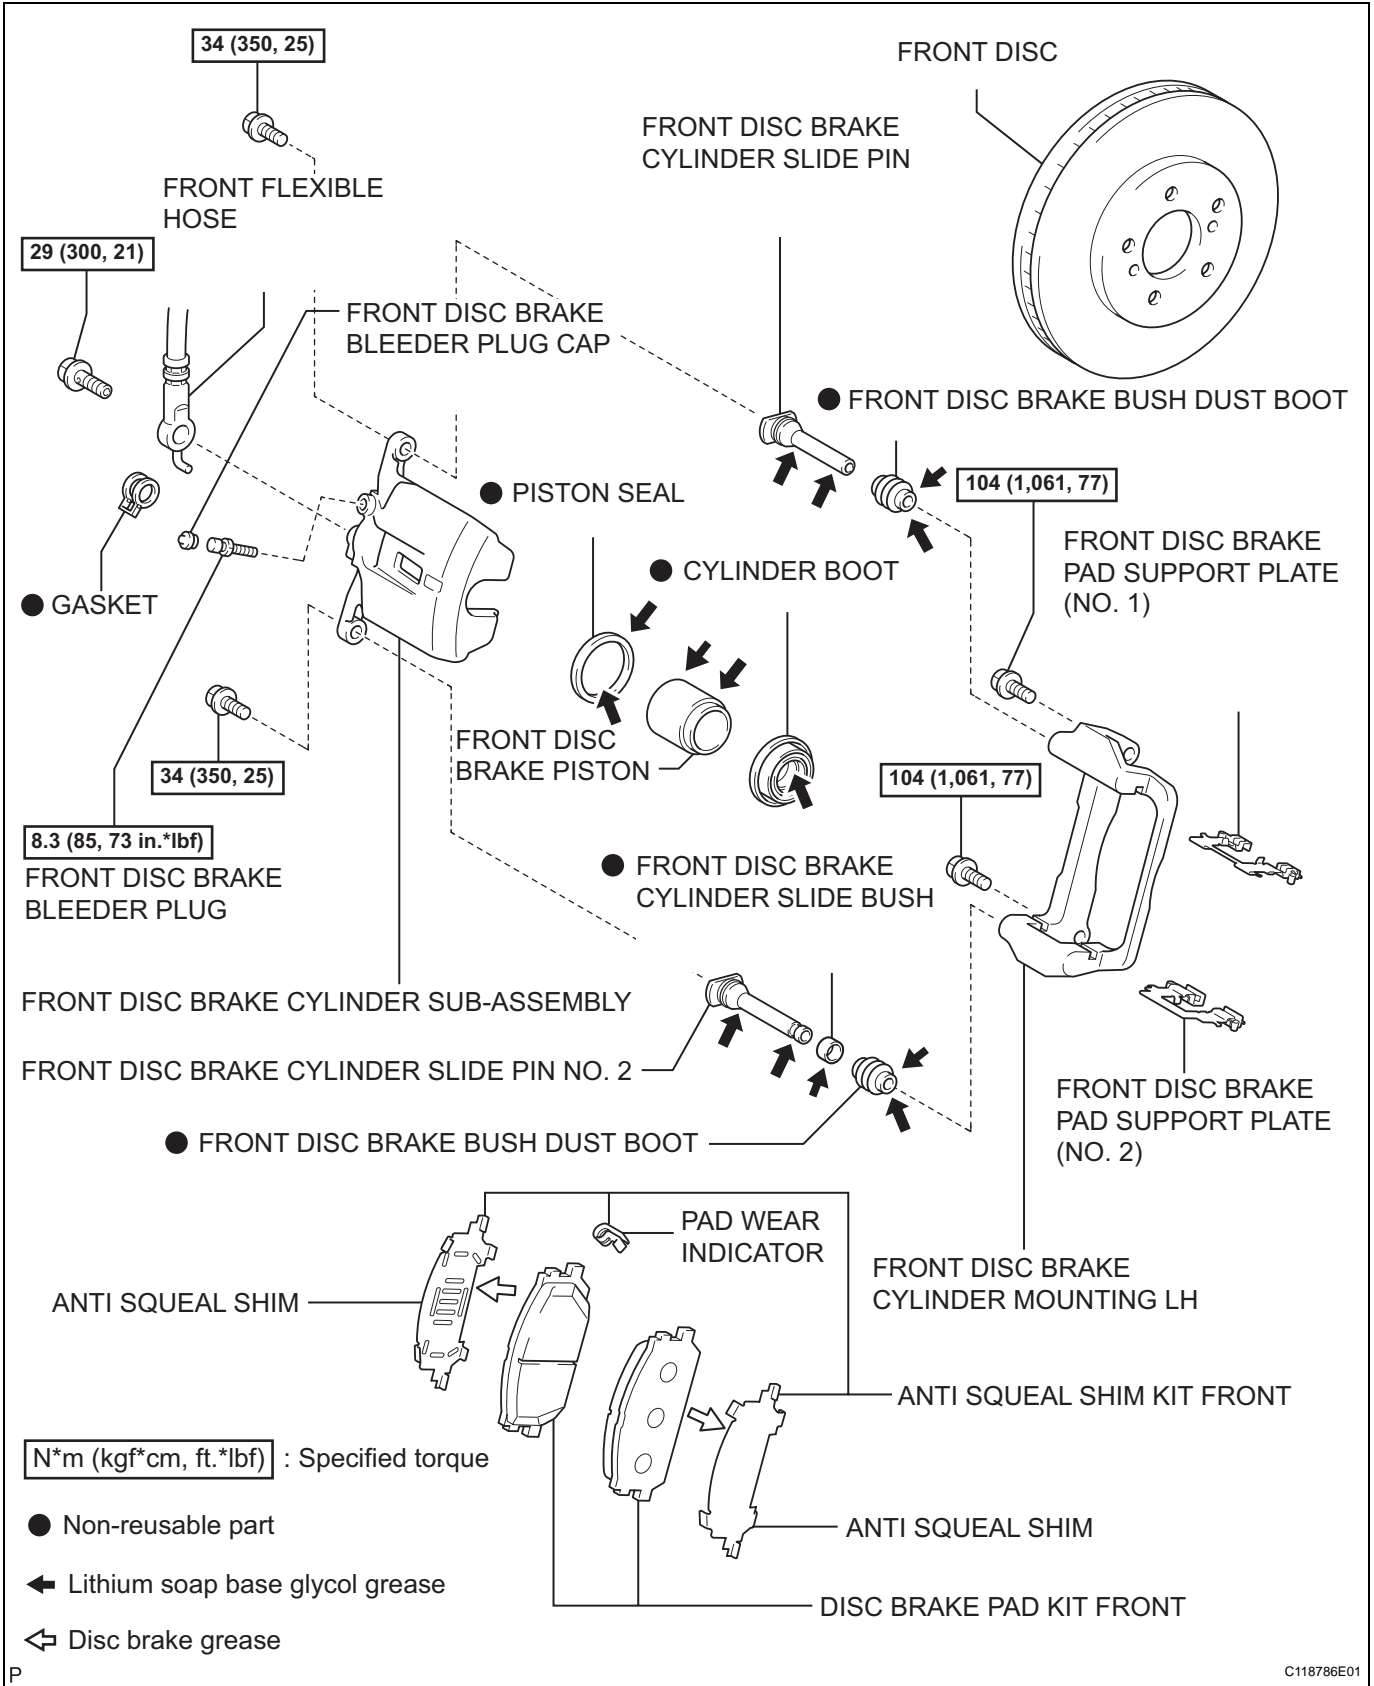

REMOVAL

1. REMOVE FRONT WHEEL

2. DRAIN BRAKE FLUID

NOTICE:

Wash the brake fluid off immediately if it adheres to any painted surfaces.

3. DISCONNECT FRONT FLEXIBLE HOSE

- (a) Remove the union bolt and the gasket from the disc brake cylinder sub-assembly, then disconnect the flexible hose.

4. REMOVE DISC BRAKE CYLINDER ASSEMBLY LH

- (a) Hold the front disc brake cylinder slide pin, slide pin (No. 2) and remove the 2 bolts.

