

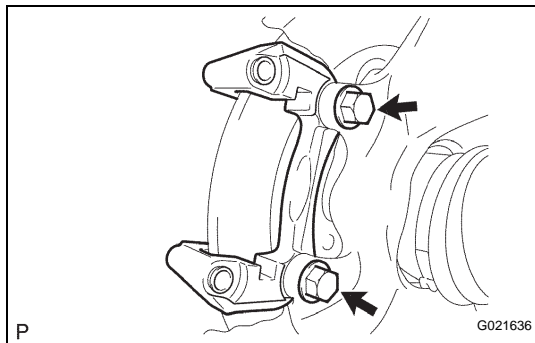


DISASSEMBLY

1. **REMOVE DISC BRAKE PAD KIT REAR (PAD ONLY)**
 - (a) Remove the 2 brake pads with the anti squeal shim.
2. **REMOVE REAR DISC BRAKE ANTI SQUEAL SHIM KIT**
 - (a) Remove the 4 anti squeal shims from each pad.
 - (b) Using a screwdriver, remove the 2 pad wear indicators from each pad.
3. **REMOVE REAR DISC BRAKE PAD SUPPORT PLATE**
 - (a) Remove the rear disc brake pad support plate (No. 1) and the rear disc brake pad support plate (No. 2) from the rear disc brake cylinder mounting LH.
4. **REMOVE REAR DISC BRAKE BUSH DUST BOOT**
 - (a) Remove the 2 rear disc brake bush dust boots from the rear disc brake cylinder mounting LH.

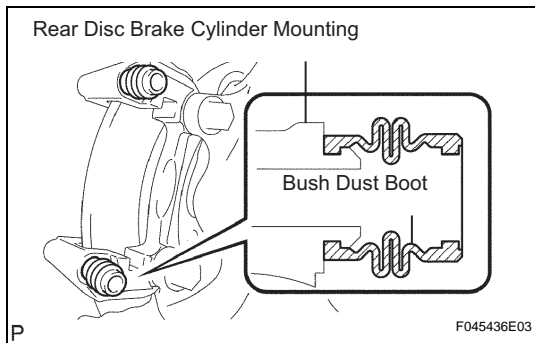


5. **REMOVE REAR DISC BRAKE CYLINDER MOUNTING LH**
 - (a) Remove the 2 bolts and the rear disc brake cylinder mounting LH.

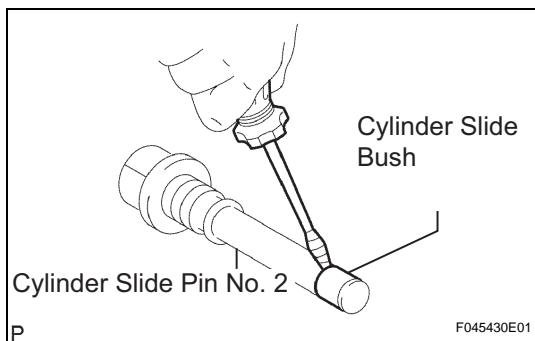

6. **REMOVE REAR DISC BRAKE CYLINDER SLIDE BUSH**
 - (a) Remove the rear disc brake cylinder slide bush from the rear disc brake cylinder slide pin No. 2.


NOTICE:
Do not damage the front disc brake cylinder slide pin No. 2.

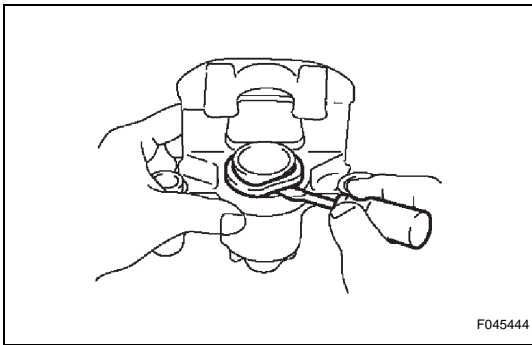**7. REMOVE CYLINDER BOOT**

- (a) Using a screwdriver, remove the cylinder boot.

NOTICE:

Do not damage the inner cylinder and cylinder groove.

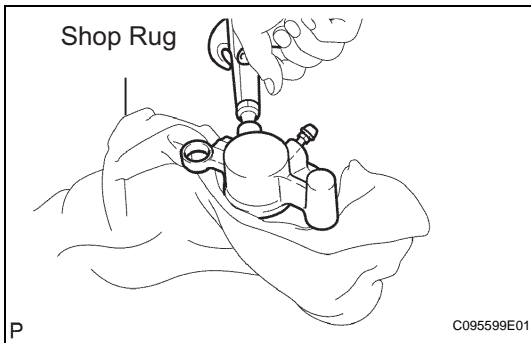**8. REMOVE REAR DISC BRAKE PISTON**


- (a) Place a shop rug between the brake piston and the rear disc brake cylinder sub-assembly.
- (b) Use compressed air to remove the brake piston from the rear disc brake cylinder sub-assembly.

CAUTION:

Do not place your fingers in front of the brake piston when using compressed air.

NOTICE:

Do not spatter the brake fluid.

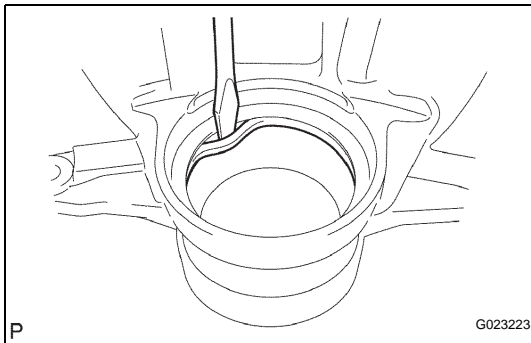**9. REMOVE PISTON SEAL**

- (a) Using a screwdriver, remove the piston seal from the rear disc brake cylinder sub-assembly.

NOTICE:

Do not damage the inner cylinder and the cylinder groove.

10. REMOVE REAR DISC BRAKE BLEEDER PLUG CAP


- (a) Remove the bleeder plug cap from the rear disc brake bleeder plug.


11. REMOVE REAR DISC BRAKE BLEEDER PLUG

- (a) Remove the rear disc brake bleeder plug from the rear disc brake cylinder sub-assembly.

12. REMOVE REAR DISC

- (a) Put matchmarks on the rear disc and the axle hub.

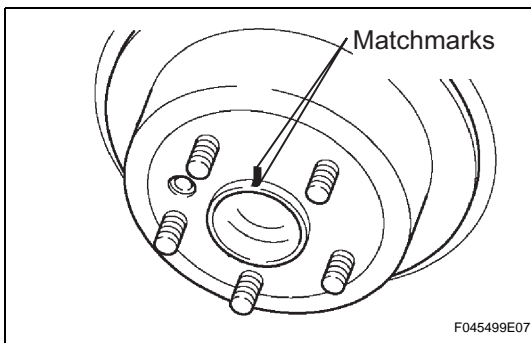

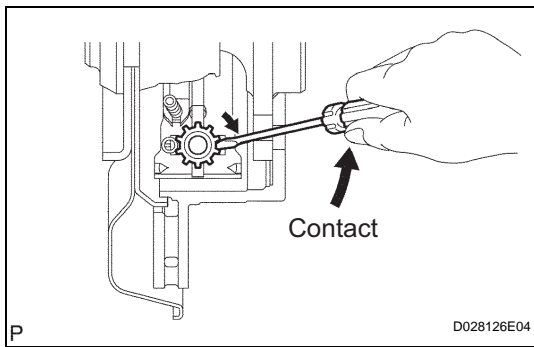

- (b) Release the parking brake, and remove the rear disc.

HINT:

If the disc cannot be removed easily, turn the shoe adjuster until the wheel turns freely.

13. REMOVE PARKING BRAKE SHOE ADJUSTING HOLE PLUG

- (a) Remove the parking brake shoe adjusting hole plug from the rear disc.