

CRUISE CONTROL SYSTEM

PRECAUTION

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following system after the terminal is reconnected.


System Name	See procedure
Lighting System (Adaptive Front-Lighting System)	(See page LI-17)
Power Window Control System	(See page WS-12)
Power Back Door System	(See page ED-33)
Sliding Roof System	(See page RF-4)

1. HANDLING PRECAUTION FOR CRUISE CONTROL SYSTEM


- (a) Turn the cruise control main switch OFF when not using the cruise control system.
- (b) Be careful as the vehicle speed increases when driving downhill with the cruise control system on.
- (c) The RESUME/ACCEL operation changes according to the cruise control system status. When the cruise control system is operating, ACCEL operates. When the cruise control system is not operating, RESUME operates.
- (d) When the cruise control system is operating and the CRUISE main indicator light blinks, turn the cruise control main switch OFF to reset the cruise control system. After the reset, if the cruise control main switch cannot be turned ON, or the cruise control system is canceled immediately after turning the cruise control main switch ON, the system may have a malfunction.
- (e) Do not use the cruise control system where the road conditions are as follows:
 - Heavy traffic
 - Steep downhill
 - Roads with sharp turns
 - Icy or snowy roads
 - Slippery roads

PARTS LOCATION

CC

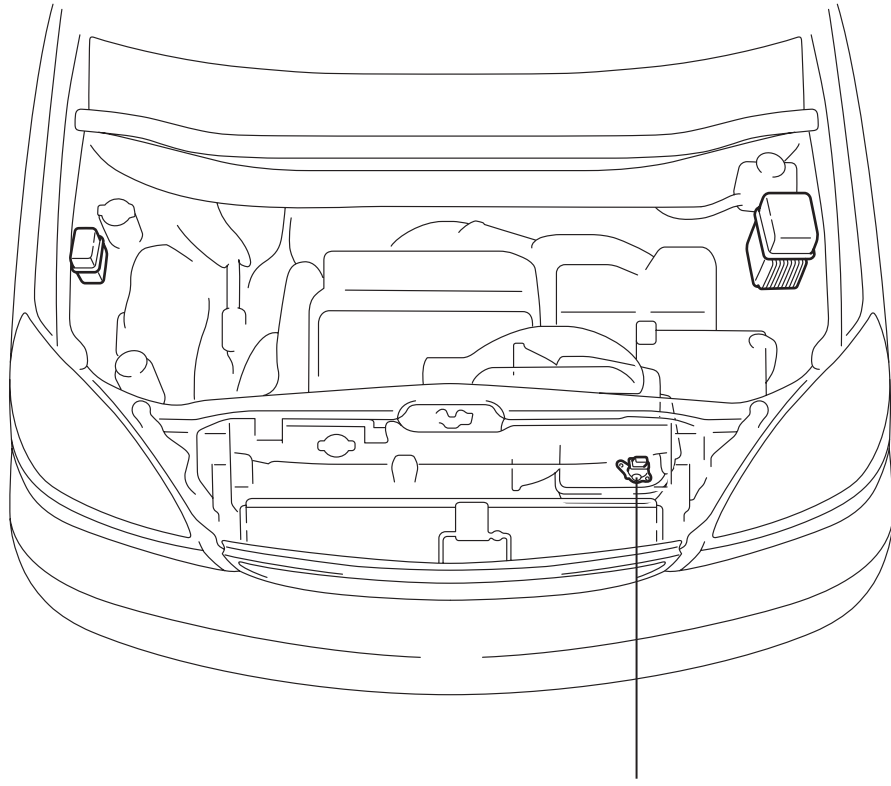

SHIFT POSITION SENSOR

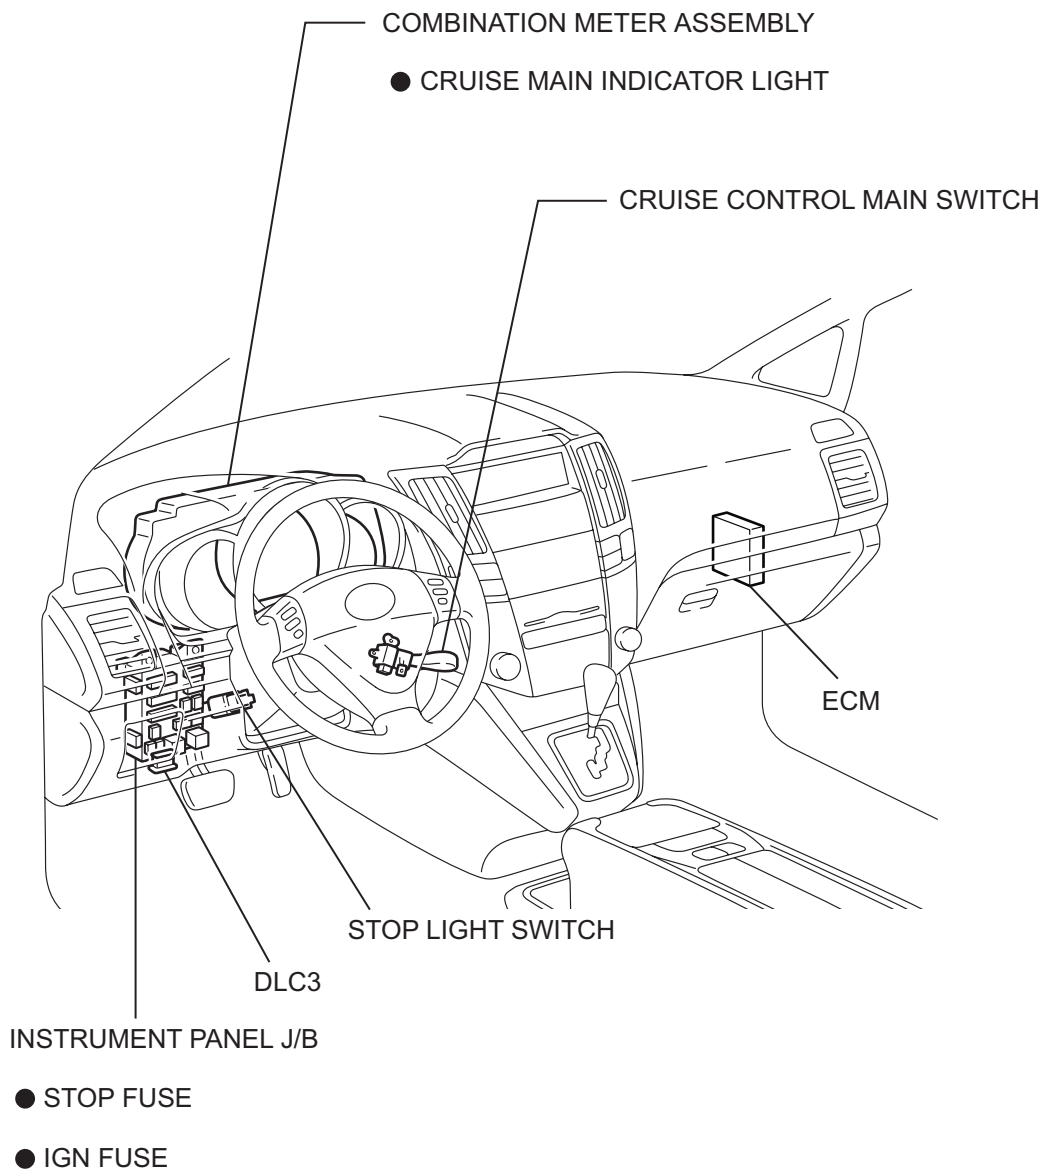

CC

N