
INSTALLATION

1. INSTALL LASER SENSOR

NOTICE:

Do not install the laser sensor if it has been damaged or received some sort of shock.

2. INSTALL FRONT BUMPER REINFORCEMENT (See page [ET-3](#))

3. ADJUST FOG LIGHT AIM

4. CHECK FOG LIGHT AIM

5. ADJUST LASER SENSOR

SST 09870-60000 (09870-60010, 09870-60020)